


Operating instructions

Low Profile Hydraulic Wrench

FSX | FSX1power

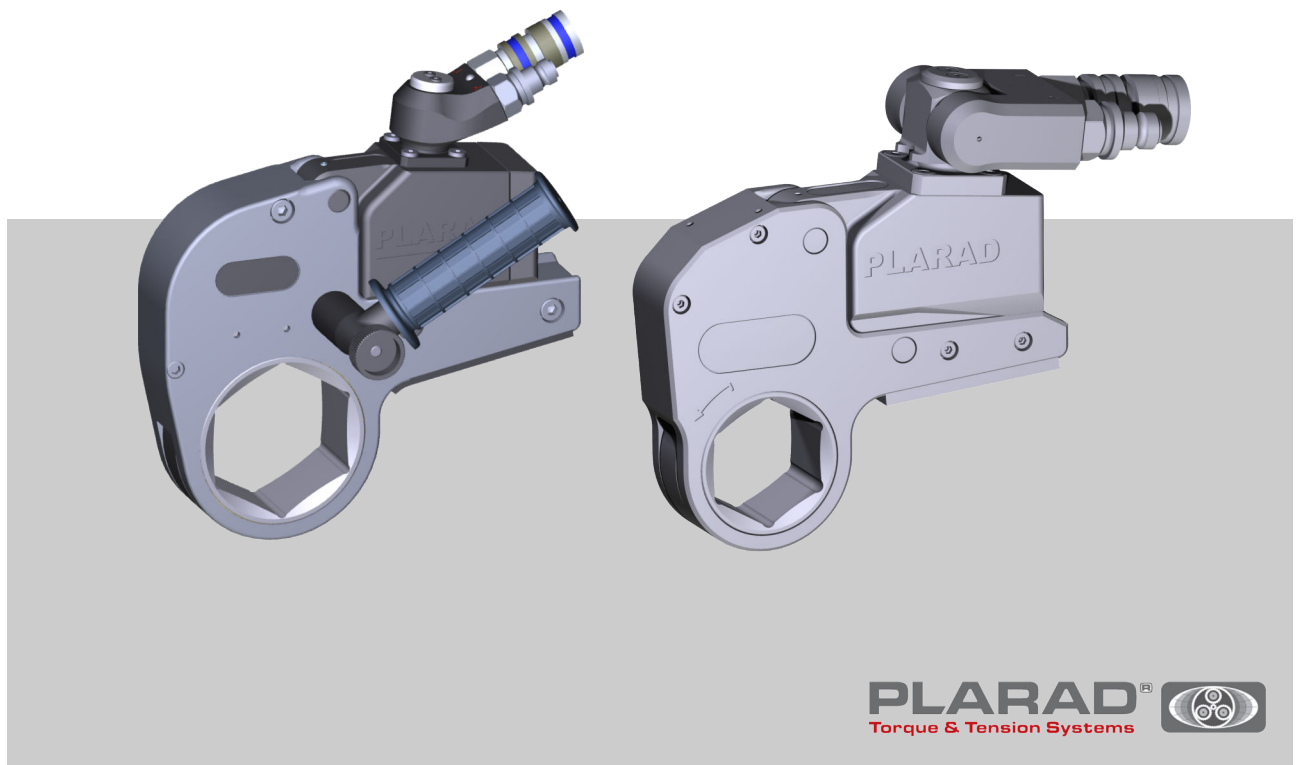

Read the manual carefully before use!
Keep for future use.

Maschinenfabrik Wagner GmbH & Co. KG

Birrenbachshöhe 12

53804 Much

GERMANY

Telephone: +49 2245 62-0

Fax: +49 2245 62-22

Email: info@plarad.de

Internet: www.plarad.de

Translation of the original operating instructions

pA# 69755, 1, en_GB



Information about this manual




This manual enables safe and efficient handling of the low profile hydraulic wrench (also referred to in the following as “hydraulic torque wrench” or “torque wrench”).

The manual is a component of the low profile hydraulic wrench and must be kept in its immediate vicinity so that the user can access it at any time.

The user must have read and understood this manual prior to commencing any tasks. A basic prerequisite for ensuring that work is performed safely is compliance with all safety warnings and guidelines in this manual. In addition, the local accident prevention regulations and general safety provisions for the low profile hydraulic wrench’s area of application apply.

Illustrations in this manual serve to provide a basic understanding and may differ from the actual design.

Versions

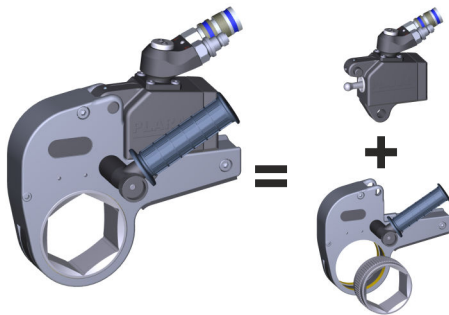


The FSX low profile hydraulic wrench comprises a ratchet head (HSX) and drive unit (SX).

The FSX^{power} low profile hydraulic wrench consists of a ratchet head (HSX^{power}) and a drive unit (SX^{power}).

For combination options, see the technical data sheet for FSX low profile hydraulic wrench.

Fig. 1: FSX = SX + HSX

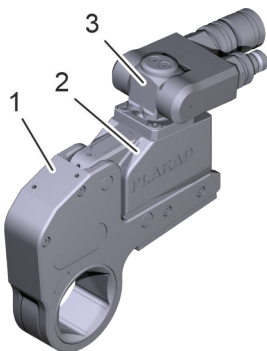

- 1 Ratchet head (HSX^{power})
- 2 Drive unit (SX^{power})
- 3 Hose port (TS-2AS)

This manual applies to the following versions:

Fig. 2: FSX^{power}

Power class	Drive	Drive/hose variants	Ratchet head
up to 1,000 Nm	SX 1, SX-EC 1	MF, TS	HSX 1*** F
	SX1 ^{power} 1	TS	HSX1 ^{power} 1***
up to 2,000 Nm	SX 2, SX-EC 2	MF, MS-H, MS-O, TS, TS-2AS	HSX 2*** F/W
	SX1 ^{power} 2	TS, TS-2AS	HSX1 ^{power} 2***

Power class	Drive	Drive/hose variants	Ratchet head
up to 5,500 Nm	SX 5, SX-EC 5	MF, MS-H, MS-O, TS, TS-2AS	HSX 5*** F/W
	SX1power 5	TS, TS-2AS	HSX1power 5***
up to 8,000 Nm	SX-EC 8	MS-O, TS, TS-2AS	HSX 8*** F/W
	SX1power 8	TS, TS-2AS	HSX1power 8***
up to 12,000 Nm	SX 12, SX-EC 12	MF, MS-H, MS-O, TS, TS-2AS	HSX 12***F/W
	SX1power 12	TS, TS-2AS	HSX1power 12***
up to 20,000 Nm	SX 20, SX-EC 20	TS, TS-2AS	HSX 20*** F/W
	SX1power 20	TS, TS-2AS	HSX1power 20***
up to 30,000 Nm	SX 30	TS, TS-2AS	HSX 30*** F/W
	SX1power 30	TS, TS-2AS	HSX1power 30***
up to 45,000 Nm	SX 45	TS, TS-2AS	HSX 45*** F/W
	SX1power 45	TS, TS-2AS	HSX1power 45***

Other applicable documents

The following documents must be observed in addition to this manual:

- Rating plate
- EU declaration of conformity
- Torque chart
 - Correlation of torque to hydraulic pressure
- Hydraulic power pack operating instructions
- Certificates (option)
- Technical data sheet

Copyright

This manual is protected by copyright.

The transfer of this manual to third parties, duplications of any kind and form – including excerpts – as well as the utilisation and/or communication of the manual's contents are not permitted without the written consent of Maschinenfabrik Wagner GmbH & Co. KG, except for internal purposes. Infringements will result in liability for damages. Maschinenfabrik Wagner GmbH & Co. KG reserves the right to assert additional claims.

Maschinenfabrik Wagner GmbH & Co. KG is the copyright holder.

Further development of the manual

This manual was compiled with great care. If you notice any errors, have any questions or identify any inconsistencies, please notify us in writing. Your suggestions for improvement will help us design a user-friendly manual.

Follow-up order

Further copies of this manual can be ordered subject to an additional fee.

Contact ☞ 'Manufacturer' on page 5.



Manufacturer

Maschinenfabrik Wagner GmbH & Co. KG
Birrenbachshöhe 12
53804 Much
GERMANY
Telephone: +49 2245 62-0
Telefax: +49 2245 62-22
Email: info@plarad.de
Internet: www.plarad.de

PLARAD[®] service

Information about PLARAD[®] service and authorised PLARAD[®] partners:

■ www.plarad.de

Table of contents

1	Unpacking.....	8
2	Getting to know the low profile hydraulic wrench.....	11
2.1	Illustration of FSX FSXpower low profile hydraulic wrench	11
2.2	Names for FSX FSX1power.....	12
2.3	Brief description.....	13
2.4	Rating plate.....	14
2.5	Controls.....	14
2.6	Accessories.....	16
3	Before you begin – safety.....	18
3.1	Symbols in this manual.....	18
3.2	Symbols on the low profile hydraulic wrench.....	20
3.3	Intended use.....	21
3.4	Misuse.....	22
3.5	Residual risks.....	22
3.5.1	Danger due to hydraulics.....	23
3.5.2	Mechanical dangers.....	25
3.5.3	Noise and ergonomics.....	27
3.6	Safety devices.....	29
3.7	Operator's obligations.....	31
3.8	Who is permitted to use the low profile hydraulic wrench?.....	32
3.9	Personal protective equipment.....	33
3.10	Environmental protection.....	35
4	Determining the particulars of the fastening operation.....	36
5	Preparing the low profile hydraulic wrench.....	37
6	Supplying with energy.....	40
7	Bracing.....	43
8	Tightening and loosening.....	46
8.1	Direction of rotation.....	47
8.2	Tightening.....	47
8.3	Loosening.....	49
8.4	After use.....	51
9	Performing maintenance.....	52
9.1	Maintenance schedule.....	52
9.2	Maintenance by the user.....	54
9.3	Lubricating.....	55
9.4	Having service tasks performed by the manufacturer.....	58
10	Troubleshooting.....	60
10.1	Identifying faults.....	60
10.2	Performing troubleshooting.....	61



11	Disposing of the low profile hydraulic wrench.....	62
12	Technical data.....	63
13	Index.....	65
	Appendix.....	68
A	Castrol – Tribol GR 3020/1000-0 PD	69
B	Kompressol CH 68 hydraulic oil	

1 Unpacking

Delivery



Fig. 3: Example, transport case

The low profile hydraulic wrench and remaining items of delivery are packed for transport in packaging that has been specially chosen according to the transport route and delivery location. Smaller deliveries are packed in a plastic or metal box.

Larger deliveries are packed in wooden boxes and delivered on a pallet.

Checking the delivery



Check the delivery for transport damage and ensure it is complete immediately upon receipt. If it is incomplete or if there are defects, note the extent of the damage on the transport documents and lodge a complaint immediately.

Scope of delivery

The scope of delivery includes:

- Low profile hydraulic wrench, comprising:
 - HSX ratchet head
 - SX drive unit
- Lubricant
- Allen key
- Document folder
 - Operating instructions
 - Torque chart
 - EU declaration of conformity

Options:

- Any accessory ordered
Bracing, square drive adapter, impact wrench socket, bracing ring, socket, Allen bit
- Test reports



Technical data sheet is available online at: <https://www.plarad.de/download-center.html>



Handling packaging material

The individual packages are packed according to the expected transport conditions. Only environmentally friendly materials are used for the packaging.

The packaging should provide protection against transport damage, corrosion and other damage. For this reason, do not destroy the packaging and do not remove it until shortly before use.

Dispose of packaging material in accordance with the applicable statutory provisions and local regulations.



ENVIRONMENT!

Danger to the environment due to incorrect disposal!

Packaging materials are valuable raw materials and, in many cases, can be further utilised or appropriately reconditioned and recycled. Incorrect disposal of packaging materials can be hazardous to the environment.

- Reuse pallets.
- Dispose of packaging materials in an environmentally sound manner.
- Observe the locally applicable disposal regulations. If necessary, engage the services of a specialist company with regard to disposal.

Transport by hand

1. ➤ Remove any hoses that are connected.
2. ➤ Seal all couplings and nipples with sealing caps before transport.
3. ➤ Make sure that all attached parts (handle, bracing, tools) are fastened securely and cannot drop.

4. ➤



WARNING!

Danger of injury from high weight!

Carry small tools by their handle.

For larger versions, use suitable transport aids. Attach to lifting gear properly.

Transport after operation



WARNING!

Danger of burns from hot surfaces or hydraulic oil!

In high ambient temperature and after prolonged operation, the low profile hydraulic wrench can reach surface temperatures of up to 80°C. The hydraulic oil gets hot when pressurised. Contact with hot surfaces and hot hydraulic oil could result in severe burns.

- Let the low profile hydraulic wrench cool down prior to transport.
- Seal all openings.
- Wear personal protective equipment.

Storage

- Disconnect the hydraulics from the hydraulic power pack when storing. Disconnect the hydraulic hoses.
- Comply with ambient conditions ↗ *Chapter 12 'Technical data' on page 63.*
- Seal all openings (couplings, nipples).



2 Getting to know the low profile hydraulic wrench

2.1 Illustration of FSX | FSXpower low profile hydraulic wrench

FSX

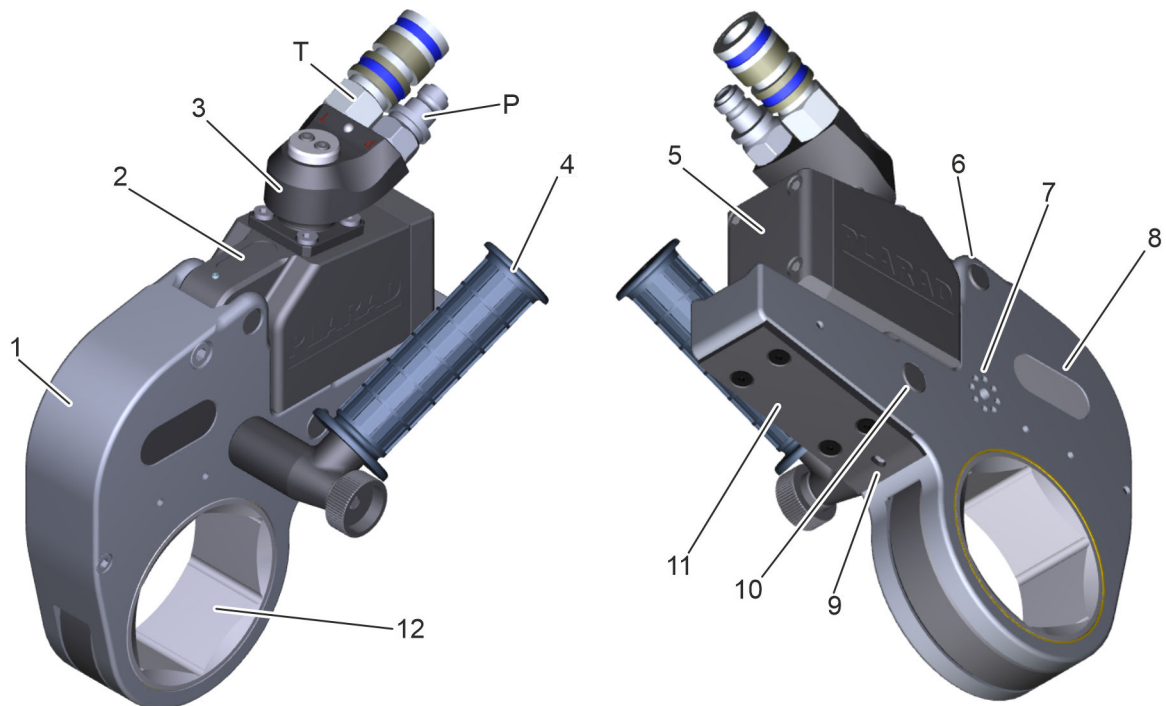


Fig. 4: Illustration of FSX

- | | | | |
|---|--|----|--------------------------------------|
| 1 | Ratchet head (HSX) | 8 | Ratchet head rating plate (HSX) |
| 2 | Drive unit's rating plate (SX) | 9 | Stud bolt |
| 3 | 360° pivoting hydraulic hose port, optionally swivelling | 10 | Fastening pin |
| 4 | Handle | 11 | Bracing plate |
| 5 | Drive unit (SX) | 12 | Hexagon insert |
| 6 | Fastening pin | T | Return |
| 7 | Attachment point for handle | P | Pressure connection, maximum 800 bar |

FSXpower

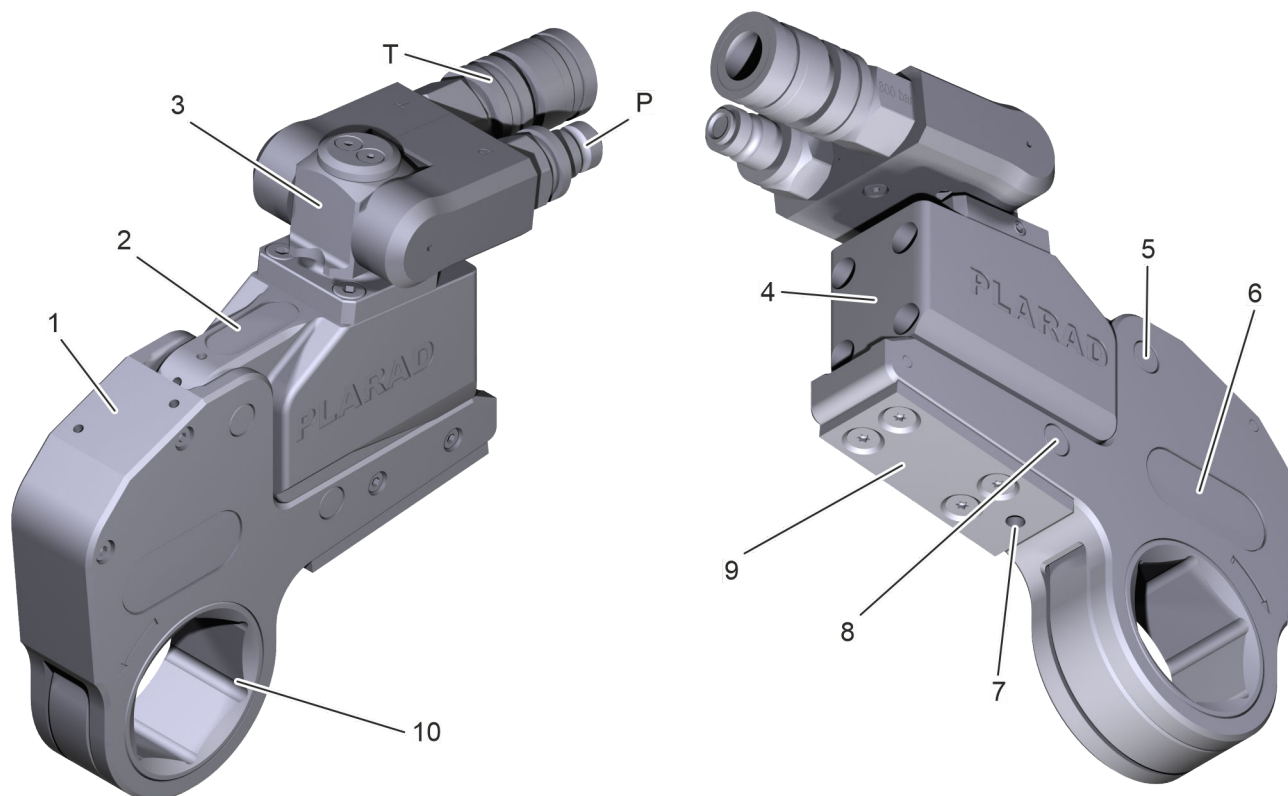


Fig. 5: Illustration of FSXpower

- | | | | |
|---|--------------------------------------|----|--------------------------------------|
| 1 | Ratchet head (HSXpower) | 7 | Stud bolt |
| 2 | Drive unit rating plate (SXpower) | 8 | Fastening pin |
| 3 | Hose port | 9 | Bracing plate |
| 4 | Drive unit (SXpower) | 10 | Hexagon insert |
| 5 | Fastening pin | T | Return |
| 6 | Ratchet head rating plate (HSXpower) | P | Pressure connection, maximum 800 bar |

2.2 Names for FSX | FSX1power

HSX – ratchet head

Name	Meaning
Example: HSX 550 F	
HSX	Ratchet head
550	Indicates the drive unit's power class
550	Maximum width across flats
F	Fixed insert
W	Interchangeable insert
Example: HSX1power 5***	



Name	Meaning
HSX1power	<i>power</i> variant of the ratchet head
5	Indicates the drive unit's power class (5,500 Nm)

SX – drive unit

Name	Meaning
Examples: SX 2, SX-EC 2, SX1power 2	
SX	Drive unit
SX-EC	Economy
SX1power	<i>power</i> variant of the drive unit
2	Power class (2,500 Nm)

Hose variants

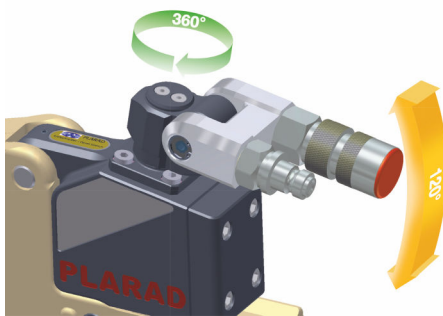


Fig. 6: TS-2AS hose port

Name	Meaning
M	Mono: Single-hose version
T	Twin: Dual-hose variant (forward and return stroke)
F	Fixed: rigid connection port
S	Swivel: connection port pivots through 360°
H	Connection port on rear
O	Connection port on top
MS	Mono-swivel: 1 hose port with connection that can be rotated through 360°
TST	Twin: dual-hose version
TST	Swivel: connection port pivots through 360°
TST	Conventional model
TS-2AS	Twin swivel: 2-axis hose port 2 hose ports (forward and return stroke) 360° rotation Pivoting upwards by 120° possible

2.3 Brief description

FSX | FSX1power

The low profile hydraulic wrench is a hand-held tool for tightening and loosening bolted connections.

The low profile hydraulic wrench consists of a ratchet head with interchangeable insert and a drive unit.



The low profile hydraulic wrench is powered by a hydraulic power pack. The hydraulic power pack generates hydraulic pressure. This pressure is shown on a pressure gauge or digital pressure indicator and can be adjusted by means of a pressure reducing valve. Hydraulic hoses (supply and return lines) deliver hydraulic oil to the low profile hydraulic wrench.

The low profile hydraulic wrench uses a lever-and-ratchet system to convert the hydraulic pressure to torque. The ball joint coupling between the lever-and-ratchet system ensures optimal transmission of the torque generated. In the event of release shock, the piston disengages from the lever and re-engages automatically. No link exists that could fracture. The integrated release shock absorber prevents release shock from damaging the housing. The precision-meshing ratchet system means that stroke does not necessarily have to be used in full.

The reaction arm is integrated into the housing. The low profile hydraulic wrench is braced using a bracing plate.

The low profile hydraulic wrench is also available in a single-hose version.

2.4 Rating plate



The following data is inscribed on the rating plate:

- Name of the manufacturer including their full address
- Machine designation
- Type designation
- Article/serial number
- Year of construction
- Weight
- Maximum torque
- Maximum operating pressure
- CE mark

2.5 Controls



The low profile hydraulic wrench is controlled exclusively through the hydraulic power pack's remote control unit.



Handle

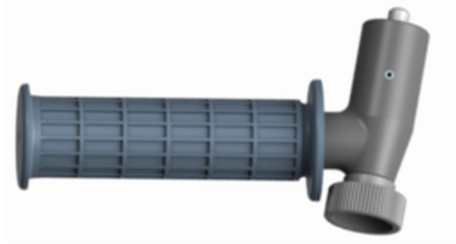


Fig. 7: Handle

The low profile hydraulic wrench can be gripped securely and carried by the handle.



Low profile hydraulic wrench sizes 1xx are supplied without a handle.


Low profile hydraulic wrench sizes 2xx and greater are supplied with a handle.

Low profile hydraulic wrench sizes 20xx and greater are supplied with transport aids. Attach transport aids to lifting gear properly when transporting.

2.6 Accessories

The following accessories are available for ordering together with the low profile hydraulic wrench and may be included in the delivery:


- Interchangeable inserts in various sizes

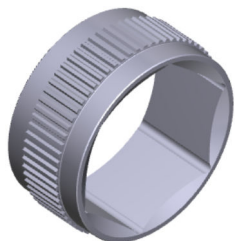

- Male/female sockets in all sizes and a/f



- Bracing element

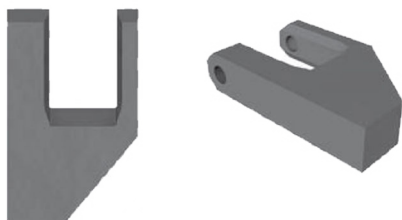



- Brace extensions in various sizes

Special accessories

Contact PLARAD[®] service.

3 Before you begin – safety

This section provides an overview of all important safety aspects for protecting personnel and for ensuring safe and fault-free operation. Further task-specific safety instructions can be found in the sections of the individual chapters.

3.1 Symbols in this manual

Safety warnings

Safety warnings in this manual are indicated by symbols. Safety warnings are introduced by signal words that identify the severity of the hazard.

**DANGER!**

This combination of symbol and signal word indicates an immediate danger that will cause serious injury or death if not avoided.

**WARNING!**

This combination of symbol and signal word indicates a potential danger that may cause serious injury or death if not avoided.

**CAUTION!**

This combination of symbol and signal word indicates a potential danger that may cause minor or slight injury if not avoided.

**NOTICE!**

This combination of symbol and signal word indicates a potential danger that may cause damage if not avoided.

**ENVIRONMENT!**

This combination of symbol and signal word indicates potential pollution of the environment.

Safety warnings in step-by-step instructions

Safety warnings may apply to specific, individual instructions. Such safety warnings will be embedded in the list of instructions to maintain readability when executing the respective action. The signal words listed above are used.



Example:

1. ➡ Loosen the bolt.

2. ➡



CAUTION!
Risk of getting trapped by lid!

Close lid carefully.

3. ➡ Tighten the bolt.

Tips and recommendations



This symbol highlights useful tips and recommendations as well as information to help you use your equipment efficiently and without disruption.

Other markings

The following markings are used in this manual in order to highlight instructions, outcomes, lists, references and other elements:

Marking	Explanation
➡	Step by step instructions
⇒	Outcomes of steps
§	References to sections of this manual and to other applicable documents
■	Lists without a fixed order

3.2 Symbols on the low profile hydraulic wrench

Overview

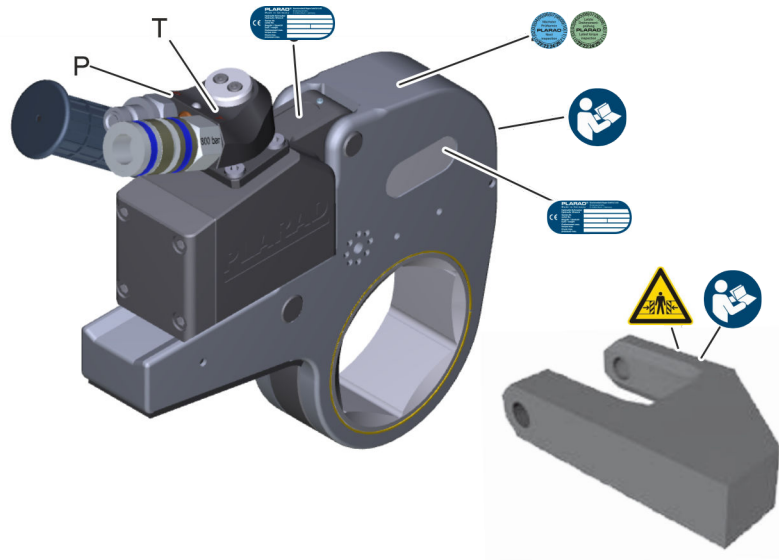


Fig. 8: Symbols on the low profile hydraulic wrench

- P Hydraulic hose nipple on pressure connection, maximum 800 bar
 T Coupling for return line hydraulic hose
 ⓘ 'Follow the manual' on page 21



- ⓘ 'Test badges' on page 21
 ⓘ Rating plate SX, rating plate HSX,
 ⓘ Chapter 2.4 'Rating plate' on page 14
 ⓘ 'Danger of crushing' on page 20

Illegible signage



WARNING!

Danger in the event of illegible signage!

Over time, signs and stickers can become dirty or be rendered unrecognisable by other means, such that hazards cannot be recognised and necessary operating instructions cannot be followed. This creates a danger of injury.

- Keep all safety notices, warnings and operating instructions in a clearly legible state at all times.
- Replace damaged signs and stickers immediately.

You will find the following symbols and information notices on the low profile hydraulic wrench:

Danger of crushing



Keep your hands away from areas bearing this warning.

There is a danger of body parts being crushed, pulled in or otherwise injured.

There is a danger of crushing injury on work equipment (e.g. machinery) or building parts (e.g. hoods, panelling, walls, fences).



It is necessary to pay greater attention when performing work at the marked locations.

Follow the manual



Read the operating instructions before use.


Test badges

The test badges state the dates of the respective tests.

Date of the next PLARAD® service



Date of the last DGUV-V3 test

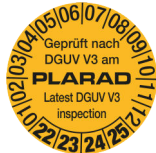

For tools with certificate:

Date of the last torque inspection



3.3 Intended use

The low profile hydraulic wrench is a hand-held tool and may only be used for tightening and loosening bolted connections within the defined specifications (↪ *Chapter 12 'Technical data' on page 63*).

The low profile hydraulic wrench is powered hydraulically.

The low profile hydraulic wrench may only be used for commercial purposes and only in conjunction with PLARAD® hydraulic power packs.

The low profile hydraulic wrench must never be used in a potentially explosive atmosphere.

Intended use includes compliance with all of the stipulations in this manual.



WARNING!

Danger of injury from unadjusted torque levels!

The correlation of operating pressure to torque was determined in a test setup according to ISO 5393 (medium test). If these values do not correspond to the actual fastening operation, this could result in injuries and property damage.

- Determine the specific fastening operation and adjust the torque levels.

3.4 Misuse

Any use beyond the intended use as well as any other use is considered misuse.



WARNING!

Danger in the event of misuse!

Misuse of the low profile hydraulic wrench can lead to dangerous situations.

- Never operate without bracing.
- Do not use the low profile hydraulic wrench as a driving motor without consulting PLARAD[®] first.
- Do not operate the low profile hydraulic wrench in continuous operation.
- Never subject the low profile hydraulic wrench, bolts or accessories to loads exceeding the permitted torque.
- Never operate unless properly braced.
- Observe the oil specifications at all times.
- Never operate without lubrication.
- Never operate outside the permissible environmental conditions.
- Never exceed the maximum operating pressure.
- Never operate if there are signs of leaking.

3.5 Residual risks

The following section outlines the residual risks potentially posed by the low profile hydraulic wrench even when it is used as intended.

To reduce the risks of personal injury and property damage and to avoid dangerous situations, observe the safety instructions listed here and the safety instructions in the other sections of this manual.



3.5.1 Danger due to hydraulics

Pressurised hydraulic fluid



WARNING!

Pressurised hydraulic components could result in life-threatening injuries!

Inadvertent opening or defects could result in the discharge of hydraulic fluid under high pressure.

Hydraulically powered drives could move unexpectedly.

Contact with hot hydraulic oil could result in severe burns.

- Prior to commencing all work, check the hydraulic power pack, connections, hoses and tools for visible damage and leaks.
Have all identified defects remedied immediately.
- Prior to commencing work on the hydraulic system, first switch it off, then depressurise it and let it cool down. Fully relieve all accumulators of pressure. Check to ensure a depressurised state.
- Do not change pressure settings such that they exceed the maximum values.
- Comply with the maintenance intervals.
- Always ensure that hydraulic hoses are properly connected and locked. Quick-release couplings must be engaged. Bolted connections must be fully secured.

Exceeding the maximum pressure



WARNING!

Danger of bursting due to excessive hydraulic pressure!

If the hydraulic pressure exceeds the maximum permissible pressure for connections, hoses, tools or components of the hydraulic power pack, these could burst. Airborne parts and hydraulic fluid discharged under high pressure could cause serious injuries.

- Ensure that all components are designed for the maximum applied hydraulic pressure and that none of the components are damaged.
- Check for defects, damage and leaks.
Have all identified defects remedied immediately.
- Comply with the maintenance intervals.

Hydraulic oil



WARNING!

Damage to health and secondary illnesses due to contact with hydraulic oil!

Contact with hydraulic oil could cause allergic reactions, skin and eye irritation, nausea and other secondary illnesses.

- Wear personal protective equipment for all work with hydraulic oil.
- Do not eat, drink or smoke in areas in which work involving hydraulic oil is performed.
- Upon completion of the work, clean or dispose of clothing and personal protective equipment contaminated with hydraulic oil in the proper manner.
- Note the safety data sheet for the hydraulic oil in use.

Oil specifications



NOTICE!

Property damage from non-compliance with the oil specifications!

Incorrect hydraulic oils and the use of contaminated hydraulic oils can result in damage. Hydraulic oil overflowing as a result of excessive oil level can result in pollution.

- Only connect purged hydraulic hoses.
- Ensure that the hydraulic hoses and hydraulic power pack are filled with identical hydraulic oil and that the hydraulic oil meets the oil specifications ↺ *'Oil specifications' on page 64.*
- Comply with the maintenance intervals.
- Top up using only new and clean hydraulic oil ↺ *'Oil specifications' on page 64.*



3.5.2 Mechanical dangers

Moving components and rotational movements



WARNING!

Danger of injury from moving components!

Moving components can cause serious injuries. There is a danger of being pulled in during rotational movements.

- During operation, do not reach into moving components or handle moving components. Do not touch the reaction arm/bracing, drive axis, impact wrench socket, socket etc.
- Secure the reaction arm/bracing and impact wrench socket properly before activating.
- Do not switch on the torque wrench while carrying it.
- Wear tight fitting work clothing with seams that will tear readily.
- Wear safety goggles.
- Protect long hair from being pulled in by rotating parts using a protective cap (hair net).

Incorrect bracing and overloading



WARNING!

Danger of injury from incorrect bracing, overloading, breakage!

Incorrect bracing or overloading of the hydraulic wrench or individual components can result in serious injuries.

- Do not use the wrench if the particulars of the fastening operation are not entirely clear.
- Note the torque chart.
- Check the reaction arm/bracing for visible damage prior to use. Do not use if there is damage.
- Brace correctly ↪ *Chapter 7 'Bracing' on page 43.*
- Do not use continuously for prolonged periods and do not use as a drive element.
- Use only PLARAD[®] original parts.

Crushing



WARNING!

Danger of crushing when bracing and due to high weight!

During operation, very strong forces act on the low profile hydraulic wrench, reaction arm/bracing plate, bracing surface/abutment and bolts. There is a danger of crushing between the reaction arm/bracing plate and the bracing surface/abutment during tightening and loosening. The high weight of the low profile hydraulic wrench can cause crushing if it falls down.

- Handle the low profile hydraulic wrench with care and as intended.
- Give due consideration to the weight during transport and during all work.
- Have work performed only by persons who are physically capable of using the low profile hydraulic wrench safely despite its high weight.
- Keep clear of the space between the reaction arm/bracing plate and bracing surface/abutment.
- Secure the low profile hydraulic wrench against falling when working at height.
- Wear safety shoes.
- Also wear an industrial safety helmet for overhead work.

Dirt and scattered objects



CAUTION!

Danger of injury from falling over dirt and scattered objects!

People may slip on or stumble over dirt and scattered objects. Falling may cause injuries.

- Always keep the work area clean.
- If objects are no longer needed, remove them from the work area and especially if such objects are at ground level.
- Mark unavoidable stumbling points with hazard tape.
- Keep handles and gripping surfaces of the hydraulic wrench dry, clean and free of lubricants. Clean them immediately if they are dirty.



Inserting tools



NOTICE!

Damage due to use of the wrong tools!

- Only use tools suitable for the fastening operation (ring spanner bits, impact wrench sockets, ratchet heads, interchangeable inserts etc.).
- Ensure a flawless, positive connection between the low profile hydraulic wrench, tool and bolt.

3.5.3 Noise and ergonomics

Noise



WARNING!

Danger of injury from noise!

The noise level of 70 dB(A) (3 dB(A) measurement uncertainty) occurring in the work area can cause hearing damage.

- Make hearing protection available.
- Recommendation: Wear hearing protection.

Hot surfaces



WARNING!

Danger of injury from hot surfaces!

Component surfaces may become very hot during operation. Surface temperatures of up to 80°C could develop. Contact between the skin and hot surfaces will result in severe burns to the skin.

- Always wear heat-resistant protective work clothing and safety gloves when working in the vicinity of hot surfaces.

Inadequate ergonomics



CAUTION!

Injuries to the musculoskeletal system from the high weight of the low profile hydraulic wrench!

Lifting and carrying heavy loads can cause permanent damage to the musculoskeletal system.

- Ensure stable footing and sufficient room for movement.
- Keep your back as straight as possible. Do not lift with your upper body hunched over, bent forward, or with your back arched.
- Lift the low profile hydraulic wrench as close to your body as possible.
- Only carry small low profile hydraulic wrenches.
- Avoid lopsided lifting. Avoid twisting your spine. Do not carry one-handed.
- Use suitable aids and lifting gear.

Inattention



WARNING!

Danger of injury due to distraction, inattention or irresponsible use!

Distraction, inattention or irresponsible use can result in losing control of the low profile hydraulic wrench and thus cause serious injuries.

- Always keep the work area well-lit.
- Keep children and unauthorised persons away.
- Work purposefully and in a responsible manner. Do not allow yourself to be distracted.
- Do not work if you are tired or under the influence of drugs, alcohol or medicine.
- Do not be lulled into a false sense of security. Do not disregard the safety information and instructions in this manual, even if the low profile hydraulic wrench seems familiar to you after frequent use.
- When the low profile hydraulic wrench is not in use, always store it securely in the transport case out of reach of children and other unauthorised persons.
- Wear the prescribed personal protective equipment.



Vibrations



During normal operation, the low profile hydraulic wrench does not generate any hazardous vibrations. The measured total vibration emission value is below 2.5 m/s² (hand-arm) and below 0.5 m/s² (whole body).

Due to the low emission values, no special measures are required to protect against vibrations.

3.6 Safety devices

Faulty safety devices



WARNING!


Danger of death due to inoperative safety devices!

If safety devices or safety functions are inoperative or disabled, there is a danger of serious injuries.

- Prior to commencing work, check that all safety devices are operative and correctly installed.
- Never disable or bypass safety devices or safety functions.

The low profile hydraulic wrench is equipped with the following safety devices and safety functions:

Pressure relief

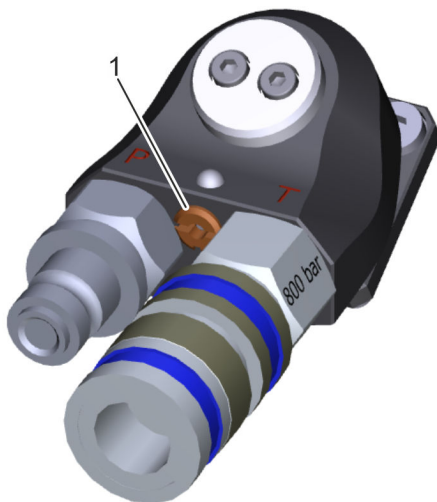


If there is no return stroke hose connected, or if there are faulty couplings in the return stroke line, a pressure relief valve (Fig. 9/1) opens in the dual-hose units' hose port. The dammed oil drains harmlessly.

Fig. 9: Pressure relief



Release shock absorber

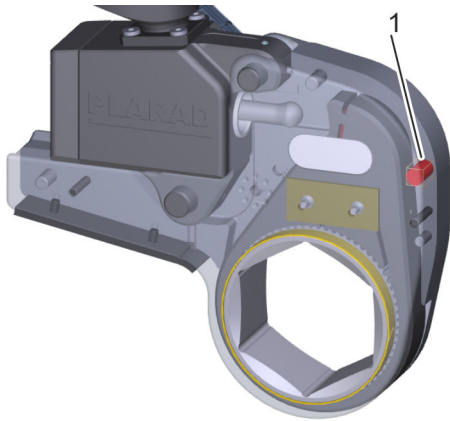

The integrated release shock absorber (Fig. 10/1) prevents release shock from damaging the housing.

Fig. 10: Release shock absorber

Circlip

The following applies only to HSX-W ratchet heads:

The interchangeable insert is prevented from falling out by a circlip. In fixed inserts, the hexagon insert is permanently installed.



3.7 Operator's obligations

The low profile hydraulic wrench is used in the commercial sector. The operator of the low profile hydraulic wrench is therefore subject to the statutory obligations pertaining to occupational safety.

In addition to the safety instructions in this manual, the applicable safety, occupational safety and environmental protection regulations for the low profile hydraulic wrench's area of application must be adhered to.

The following specifically applies in this regard:

- Operators must familiarise themselves with the applicable occupational safety regulations and, as part of a risk assessment, determine additional dangers that arise as a result of the specific operating conditions at the low profile hydraulic wrench's operating site. The findings of this risk assessment must be used to draft safety instructions for operating the low profile hydraulic wrench.
- During the entire time the low profile hydraulic wrench is in use, the operator must check whether the safety instructions they have compiled reflect current regulations and, if necessary, the operator must change the instructions accordingly.
- The operator must clearly define and regulate responsibilities for all work on and with the low profile hydraulic wrench. The authority and responsibilities of personnel regarding operation, set-up, maintenance and repair must be clearly defined.
- The operator must reliably check the use of the low profile hydraulic wrench and ensure that only commissioned and instructed personnel work with it. Personnel being trained or instructed and personnel undertaking vocational training must always be supervised by an experienced person when working with or on the low profile hydraulic wrench.
- The operator must ensure that the low profile hydraulic wrench is not opened and that no work is performed on the electrical equipment by unauthorised persons.

Work on electrical equipment may only be performed by an electrician or by trained persons under the guidance and supervision of an electrician. Adhere to electrotechnical regulations for safety reasons.

The operator is further responsible for ensuring that the low profile hydraulic wrench is in technically flawless condition at all times. The following applies for this reason:

- The operator must ensure adherence to the maintenance intervals described in this manual.
- The operator must have the functionality and integrity of all safety devices checked on a regular basis.

3.8 Who is permitted to use the low profile hydraulic wrench?



WARNING!

Danger of injury if personnel are insufficiently qualified!

If unqualified personnel perform work on or with the low profile hydraulic wrench or if such persons are present in the danger zone while work is being performed, dangers arise that could cause serious injuries and considerable damage.

- Have all tasks performed by suitable qualified personnel without exception.
- Keep unqualified personnel away from the danger zones and work areas.

User

Users of the low profile hydraulic wrench have the requisite knowledge and the requisite training for handling hydraulics. Furthermore, during training by the operator, users have been trained in relation to the tasks assigned to them and the potential dangers associated with improper conduct.

Users are trained in how to use the personal protective equipment, are familiar with the most important specifications, situations and information relating to working with low profile hydraulic wrenches and are capable of using the low profile hydraulic wrench safely. This includes connecting hydraulic hoses.

The user must be older than the legally permissible minimum age.

Users may only perform tasks that exceed operation under normal operating conditions if this is specified in this manual and the operator has expressly entrusted the users with the performance of such tasks.

The user knows who their supervisor is, can contact their supervisor if they have questions or in an emergency, and is able to communicate with their supervisor.

The user is familiar with all residual risks and is trained in the practical handling of the low profile hydraulic wrench.

Qualified low profile hydraulic wrench personnel

Qualified low profile hydraulic wrench personnel are trained for the specific task area in which they work and are familiar with the relevant standards and regulations.

Due to their professional training and experience, qualified personnel are able to perform work with the low profile hydraulic wrench, recognise and avoid potential dangers independently and indicate them to users.

Specific capabilities of qualified low profile hydraulic wrench personnel include:

- Operate the low profile hydraulic wrench safely.
- Use all functions of a hydraulic power pack.



- Uphold safety, occupational safety and health protection when using the hydraulic power pack and low profile hydraulic wrench and convey this to users.
- Determine the condition and suitability of hydraulic hoses for the respective application.
- Identify damage and arrange for repairs or get in touch with the manufacturer.
- Instruct users in the proper manner.

Operator

The operator is the person who operates the low profile hydraulic wrench for commercial or economic purposes themselves, or makes it available for a third party to use, and who bears legal responsibility for the product vis-à-vis protection of personnel and third parties during operation.

🔗 Chapter 3.7 'Operator's obligations' on page 31

PLARAD[®] service

Certain work may only be performed by PLARAD[®] service or by personnel authorised by Maschinenfabrik Wagner GmbH & Co. KG. Other personnel are not authorised to perform this work. Contact PLARAD[®] service or authorised PLARAD[®] partners regarding performance of the work that is due.

Contact: www.plarad.de

🔗 Chapter 9.4 'Having service tasks performed by the manufacturer' on page 58

Unauthorised persons



WARNING!

Danger of death for unauthorised persons due to dangers in the danger zone and work area!

Unauthorised persons, who do not meet the requirements described in this manual, are not aware of the dangers in the danger zone. There is therefore a danger of serious injuries or even death for unauthorised persons.

- Keep unauthorised persons away from the danger zone and work area.
- If in doubt, address the respective persons and instruct them to leave the danger zone and work area.
- Suspend work while there are unauthorised persons loitering in the work and danger zone.

3.9 Personal protective equipment

Safety gloves



Safety gloves are used to protect the hands from friction, abrasions, punctures or deeper injuries and from contact with hot surfaces.

Safety shoes



Safety shoes protect the feet from crushing, falling parts and from slipping on slippery ground.

Hearing protection



Hearing protection is used to protect against hearing damage caused by noise.

Safety goggles



Safety goggles are used to protect the eyes from airborne parts and liquid jets.

Protective work clothing



Protective work clothing is tight fitting work clothing with a low tearing resistance, with tight sleeves and without any protruding parts.

Protective cap



The protective cap (hairnet) is used to protect the hair from being pulled in by rotating and moving parts, such as bolts.

The wearing of a protective cap is mandatory if your hair is longer than the circumference of the moving shaft.

Industrial safety helmet



Industrial safety helmets are used to protect the head from falling objects, suspended and swinging objects and from bumping into stationary objects.

An industrial safety helmet must be worn for overhead work.



3.10 Environmental protection



ENVIRONMENT!

Danger of pollution from incorrect handling of environmentally hazardous substances!

If environmentally hazardous substances are handled incorrectly, especially if such substances are disposed of incorrectly, this could cause significant damage to the environment.

- Always adhere to the instructions given below in relation to the handling of environmentally hazardous substances and the disposal thereof.
- If environmentally hazardous substances accidentally enter the environment, adopt suitable measures immediately. If in doubt, notify the competent local authority of the damage and inquire about suitable measures to be taken.

The following environmentally hazardous substances are used:

Lubricants

Lubricants, such as greases and oils, contain toxic substances. Such substances must not enter the environment.

If lubricants do escape, arrange for them to be disposed of by a specialist disposal company.

Observe the manufacturer's safety data sheet.

Hydraulic oil

Hydraulic oil can contain harmful and environmentally hazardous substances. It must not enter the environment (soil, water), sewage system or household waste. Dispose of hydraulic oil and waste containing hydraulic oil separately via an approved disposal company.

Observe the manufacturer's safety data sheet.



4 Determining the particulars of the fastening operation

Information about bolted connections

The hydraulic wrench reacts differently to “soft” and “hard” bolted connections.

“Soft” and “hard” bolted connections themselves each react differently to each other, as the thread and lubrication state can vary from bolted connection to bolted connection.

The hydraulic wrench’s torque, and thus the associated hydraulic power pack pressure, must be set for each fastening operation individually and checked directly during the fastening operation.

Use a rotating, electrical measuring transducer or a calibrated torque spanner for checking purposes.

Personnel: ■ Operator

The hydraulic wrench can only be used safely and properly if the particulars of the fastening operation are known.

1. ➤ Determine the particulars of the fastening operation. To do so:
 Determine a suitable bracing surface and select a suitable reaction arm for proper bracing.
 Determine suitable tools (impact wrench socket, ring spanner bit etc.).
2. ➤ Determine the torques, angles and hydraulic pressure settings required for the fastening operation.
3. ➤ Make further accessories (bracing aids, suspension etc.) available according to the situation.

5 Preparing the low profile hydraulic wrench

Unsecured or overloaded components



WARNING!

Danger of injury from unsecured or overloaded components!

Unsecured components or components subjected to loads exceeding the intended use could result in uncontrolled low profile hydraulic wrench behaviour, outward ejection of components or breakage and thereby cause serious injuries.

- Carefully determine all the particulars of the fastening operation.
- Ensure that all components are used within the scope of their intended use.
Never exceed load limits (e.g. maximum torques).
- Only use impact wrench sockets.
- Never put the low profile hydraulic wrench into operation if the reaction arm or impact wrench socket are unsecured.

- Personnel: ■ Qualified low profile hydraulic wrench personnel
- Protective equipment: ■ Protective work clothing
■ Safety shoes

Prior to being used for tightening or loosening, the particulars of the fastening operation must be known and the low profile hydraulic wrench must be prepared.

Determining the fastening operation

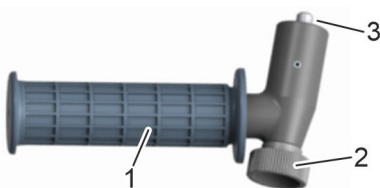


Fig. 11: Adjusting the handle

1. → Ensure that the particulars of the fastening operation have been determined ↗ *Chapter 4 'Determining the particulars of the fastening operation' on page 36* and that all parameters are available.

2. →



You can attach the handle to either side of the low profile hydraulic wrench.

If available, adjust the handle (Fig. 11/1). To do so, loosen the wheel (Fig. 11/2), turn the handle to the desired position and refasten the wheel.

Checking the bracing plate

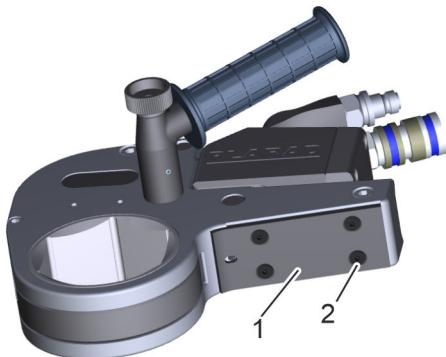


Fig. 12: Bracing

- 1 Bracing plate
- 2 4 bolts

Connecting the ratchet head and drive unit

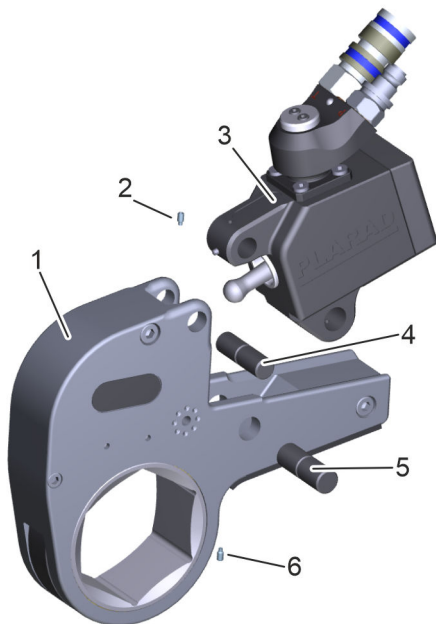


Fig. 13: Connecting the ratchet head and drive unit

- 1 Ratchet head (HSX | HSX1power)
- 2 Stud bolt fastening pin
- 3 Drive unit (SX | SX1power)
- 4 Fastening pin
- 5 Fastening pin
- 6 Stud bolt

3. ➔ Make sure that the handle is firmly attached to its low profile hydraulic wrench connection (Fig. 11/3).

4. ➔ Make sure that the bracing plate is undamaged and that the four bolts are tight. Replace the bracing plate if it is damaged.

5. ➔ Choose an appropriate combination of ratchet head and drive unit for the fastening operation.



HSX and SX must share an identical power class.

Example: SX-EC 1 MF – HSX 141 F

*Example: SX1power 1 – HSX1power 1****



HSX and SX are not compatible with HSX1power and SX1power.

Only use ratchet head and drive unit power variants together.

6. ➔



There must be no hydraulic hoses connected.

Insert the drive unit (Fig. 13/3) into the ratchet head (Fig. 13/1). The holes for the fastening pins (Fig. 13/4 and 5) must align.



Fig. 14: Fastening pin

- 1 Fastening pin
- 2 Tool for pressing out the fastening pins

Swapping the hexagon insert



Fig. 15: Circlip pliers

Additional brace

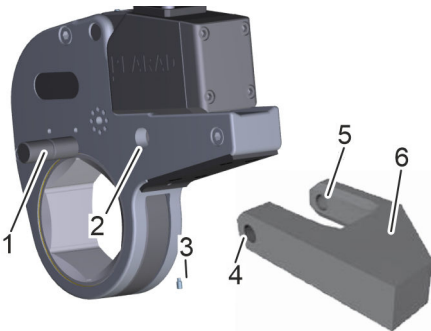


Fig. 16: Additional brace

Brace extension

7. Push in both fastening pins (Fig. 13/4 and 5) until they engage.

8. Secure the fastening pins (Fig. 13/4 and 5) with stud bolts (Fig. 13/2 and 6).

⇒ The ratchet head and drive unit automatically connect during the first stroke.

9. Fixed inserts can only be swapped by separating the two housing halves.

On ratchet heads with interchangeable inserts (HSX-W), the hexagon insert can be used. To do so, slot the hexagon insert into the toothed bushing.

10. Fasten the hexagon insert with a circlip. Slide on the circlip using circlip pliers (Fig. 15) and clamp it.

⇒ The hexagon insert is secured.

11. An additional brace is available as an optional accessory. To mount it, unfasten the stud bolt (Fig. 16/3).

12. Press out the fastening pin (Fig. 16/1) with a suitable tool (Fig. 14/2).

13. Position the additional brace (Fig. 16/6) so that the holes (Fig. 16/2, 4 and 5) align.

14. The additional brace comes with a longer fastening pin. Slide the longer fastening pin into place until it engages.

15. Fasten the stud bolt (Fig. 16/3).

⇒ The additional brace is ready for use.

16. A brace extension is available as an optional accessory. Proceed as instructed for the additional brace to mount it
↳ 'Additional brace' on page 39.

17. Attach further accessories if such accessories have been identified as necessary for the fastening operation.

6 Supplying with energy

Pressurised hydraulic fluid



WARNING!

Danger of injury from pressurised hydraulic fluid jets!

Faulty or improperly connected hydraulic hoses can cause hydraulic fluid to eject under high pressure, causing critical injuries.

Contact with hot hydraulic oil could result in severe burns.

- Prior to commencing all work, check the hydraulic power pack, connections, hoses and tools for visible damage and leaks.
Have all identified defects remedied immediately.
- Do not change pressure settings such that they exceed the maximum values.
- Only use hydraulic hoses approved for operating pressures of at least 800 bar.
- Comply with the maintenance intervals.
- Always ensure that hydraulic hoses are properly connected and locked. Quick-release couplings must be engaged. Bolted connections must be fully secured.

Hydraulic power pack

Energy is supplied from a hydraulic power pack. Observe the specifications ↗ *'Hydraulic power pack' on page 63.*



Connecting hydraulic hoses

- Personnel: ■ User
- Protective equipment: ■ Protective work clothing
■ Safety goggles
■ Safety gloves
■ Safety shoes

1. ➤ Ensure that the hydraulic power pack meets the relevant specifications ↗ *'Hydraulic power pack' on page 40.*
2. ➤ Ensure that the hydraulic power pack is ready for use ↗ hydraulic power pack operating instructions. When doing so, make sure that the oil specifications are being observed, that the hydraulic hoses have been purged and that there is a sufficient quantity of oil in the hydraulic power pack's surge tank.
3. ➤ Ensure that the hydraulic hoses have not exceeded the maximum period of use.

Period of use



Hose check:

- The maximum period of use must not be exceeded.
*Comply with the replacement interval.
Use for a maximum of 5 years.*
- The maximum pressure must not be reached.
- Use filled hydraulic hoses only.
- Oil specifications must match.
- Couplings and nipples must be compatible and be undamaged.
- There is no visible damage.

Connecting

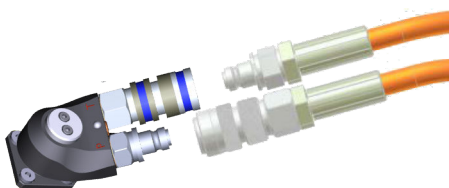


Fig. 17: Example of connecting hydraulic hoses

4. ➤



The low profile hydraulic wrench may feature a variety of coupling systems.

Ensure that the coupling/nipple combination is suitable and free of damage.

5. ➤ Ensure that the maximum permissible pressures of all components are sufficient.
6. ➤ Ensure that the hydraulic hose is fully filled with suitable hydraulic oil ↗ *'Oil specifications' on page 64.*
7. ➤ Ensure that coupling and nipples are unsoiled. Remove any soiling.

Sequence to observe

8. ➔



Connect hydraulic hoses only in a depressurised state!

The hydraulic power pack's motor may be running.

Connect the hydraulic hoses to the hydraulic power pack and low profile hydraulic wrench.

When connecting the low profile hydraulic wrench, proceed according to the following sequence:

1. - Hydraulic power pack pressure connection
2. - Low profile hydraulic wrench pressure connection
3. - Hydraulic power pack return line
4. - Low profile hydraulic wrench return line

9. ➔

Check that the hydraulic hoses are locked in place.



Older couplings have counter-threads. Tighten to lock.

New couplings have a bayonet closure. Let it fully engage.

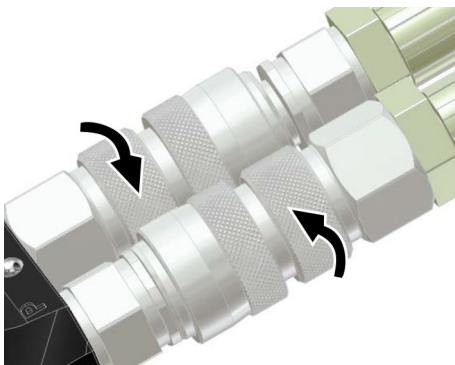


Fig. 18: Locking the hydraulic connections

Purging

Setting the operating pressure

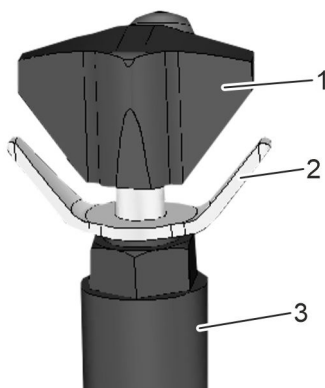


Fig. 19: Pressure adjustment valve

- 1 Knob
- 2 Adjustment lock
- 3 Pressure adjustment valve

10. ➔

Purge ⚙ hydraulic power pack operating instructions.

11. ➔

Set the operating pressure ⚙ hydraulic power pack operating instructions, ⚙ torque chart.



7 Bracing

Reaction arm/bracing plate

Torque can only be generated if the reaction forces are absorbed. On the low profile hydraulic wrench, this is what the integrated reaction arm with bracing plate is for.

An additional brace is available as an optional accessory.

For fastening operations for which the standard reaction arm is unsuitable, contact PLARAD[®] service.

Danger of crushing



WARNING!

Danger of crushing when bracing!

During operation, very strong forces act on the low profile hydraulic wrench, reaction arm, bracing surface and bolts. Body parts could get between the reaction arm and bracing surface. This could result in serious injuries.

- Never reach between the reaction arm and bracing surface.
- Keep hands and other body parts clear of the mating surface.

Incorrect bracing and overloading



WARNING!

Danger of injury from incorrect bracing, overloading, breakage!

If the low profile hydraulic wrench is not sufficiently braced, it can slip out of place and be ejected. Any point contact between the reaction arm and the corners of a bracing element can cause considerable forces to act on the low profile hydraulic wrench. Incorrect bracing or overloading of the reaction arm, bolts or other components can result in serious injuries and damage the low profile hydraulic wrench.

- Do not use the low profile hydraulic wrench if the particulars of the fastening operation are not entirely clear.
- Note the torque chart.
- Check the reaction arm for visible damage prior to use. Do not use the reaction arm if it is damaged.
- Brace the reaction arm correctly. Note the following instructions regarding bracing.
- Always ensure that the reaction arm is in full contact with the surface.
- Never use the hydraulic hose port to brace the device.
- Use only PLARAD[®] original reaction arms.

Bracing

To tighten or loosen, you need to brace the bracing plate against an abutment in opposition to the direction of rotation before switching on the low profile hydraulic wrench.

1. ➤ Find the ideal bracing surface for the fastening operation.
2. ➤ Make sure that the bracing plate is firmly in position.

Ideal bracing situations

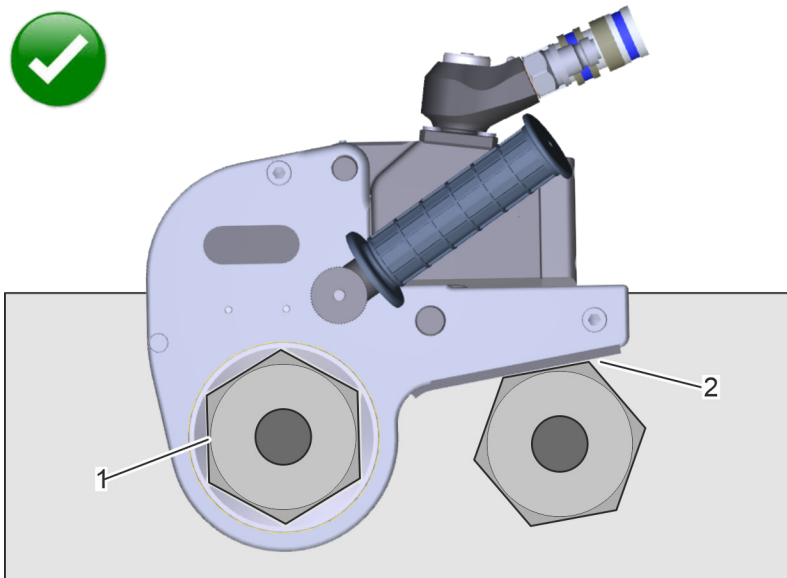


Fig. 20: Ideal bracing situation

- 1 Suitable insert
- 2 Bracing plate lies flush

3. ➤ Ensure that the reaction arm is in full contact with the bracing surface (Fig. 20/2) and cannot slip out of place.

If the standard reaction arm will not work, use an additional brace. If you have questions, contact PLARAD[®] service.

Inadmissible bracing situations

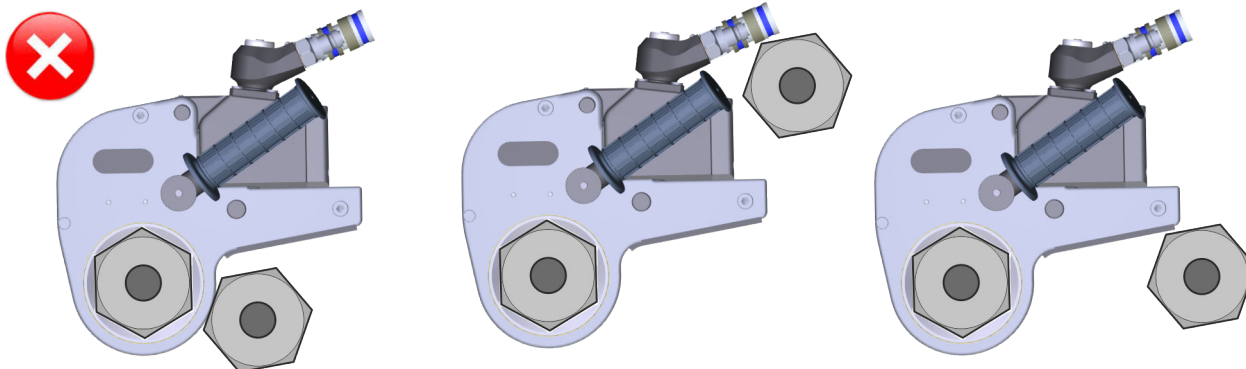


Fig. 21: Inadmissible bracing situations

**4.** →**NOTICE!****Danger of fracture from point loads!**

Ensure that the torque is not being opposed by unsuitable points, such as in Fig. 21.

Never brace with any part beyond the bracing plate.

Never use the hydraulic hose port to brace the device.

Never brace on a single point of an oblique surface.

8 Tightening and loosening

Residual risks during operation



WARNING!

Danger of injury from improper use!

During operation, very strong forces act on the tool, reaction arm, bracing surface, bolts and hydraulic hoses. Body parts could get between the reaction arm and bracing surface. Components may become overloaded. Hydraulic oil may escape under high pressure. This could result in serious injuries.

- Never put body parts between the reaction arm and bracing surface.
- Never attempt to hold the reaction arm in place.
- Never touch the reaction arm while the tool is running.
- Secure all detachable components.
- Position the tool with care.
- Only use hydraulic hoses that are approved for the operating pressure and are free of damage.
- Never overload components.
- Note the torque chart. Set the pressure properly.
- Before use, check the reaction arm, hydraulic hoses and all other components for signs of damage. Do not use damaged components.
- Brace correctly  *Chapter 7 'Bracing' on page 43.*
- Use PLARAD[®] attachments only.
- If you have questions, contact PLARAD[®] service.

Hot surface



WARNING!

Danger of burns from hot surfaces!

In high ambient temperature, the low profile hydraulic wrench can reach surface temperatures of up to 80°C.

- Wear personal protective equipment.
- Allow the low profile hydraulic wrench to cool down before performing any work on it.



Working as a team



WARNING!

Danger of injury from poor coordination!

When two people use the low profile hydraulic wrench and remote control as a team, poor coordination can cause injuries.

- Work alone wherever possible. Have only a single person position and brace the low profile hydraulic wrench and start the hydraulic power pack by remote control.
- If working alone is not possible, ensure good communication at all times.
- If coordination becomes difficult, immediately cease all work.

8.1 Direction of rotation

- | | |
|-----------------------|--|
| Personnel: | ■ Qualified low profile hydraulic wrench personnel |
| Protective equipment: | ■ Protective work clothing |
| | ■ Safety shoes |

1. ➤ To switch between tightening and loosening, flip over the low profile hydraulic wrench to position it on the bolt the other way up.
2. ➤ If necessary, swap the interchangeable insert or tool to the other side.
3. ➤ If necessary, readjust the handle.

8.2 Tightening



WARNING!

Danger of injury from component fracture!

Components or bolted connections may tear while working. The low profile hydraulic wrench may eject at force from the bolting point.

- Stay clear of the low profile hydraulic wrench's longitudinal axis.
- Load low profile hydraulic wrench, attached parts and bolts only up to the permitted maximum torque.
- Also wear an industrial safety helmet for overhead work.

- | | |
|-----------------------|----------------------------|
| Personnel: | ■ User |
| Protective equipment: | ■ Protective work clothing |
| | ■ Safety goggles |
| | ■ Safety gloves |
| | ■ Safety shoes |
| | ■ Industrial safety helmet |

Prerequisites

- The hydraulic power pack is operational and the remote control is within reach.
 - ↳ Hydraulic power pack operating instructions
- The low profile hydraulic wrench is ready for use.
 - ↳ Chapter 5 'Preparing the low profile hydraulic wrench' on page 37
- The hydraulic hoses have been connected.
 - ↳ Chapter 6 'Supplying with energy' on page 40
- The low profile hydraulic wrench has been braced properly.
 - ↳ Chapter 7 'Bracing' on page 43

Lubrication

1. ➤ Ensure that the bearing parts inside the housing are sufficiently lubricated.
 - ↳ Chapter 9.3 'Lubricating' on page 55

Positioning

2. ➤ If possible, tighten the bolt by hand beforehand.
3. ➤ Make sure that the direction of rotation has been set correctly.
4. ➤ Carefully position the low profile hydraulic wrench on the bolt head or nut. The bolt head or nut must be completely covered by the tool. Adjust the accessories accordingly.
5. ➤ Ensure correct bracing ↳ Chapter 7 'Bracing' on page 43.

6. ➤



WARNING!

Danger of injury from component fracture!

Make sure that there is no one in the low profile hydraulic wrench's or hydraulic power pack's danger zone.

Stay clear of the low profile hydraulic wrench's longitudinal axis.

Starting

7. ➤ Switch on the hydraulic power pack using the remote control
 - ↳ hydraulic power pack operating instructions.
 - ⇒ You will hear the sound of the driver being ratcheted over on every return stroke. This indicates that the piston has pulled the ratchet lever back again correctly.
8. ➤ If you cannot hear it ratcheting over, switch off the low profile hydraulic wrench and begin troubleshooting ↳ Chapter 10 'Troubleshooting' on page 60.



9. ➔ Use the remote control to execute the 'tightening' function until the bolt is no longer being turned.



Depending on the hydraulic power pack, manual and automatic fastening operations may be possible.

🔧 *Hydraulic power pack operating instructions*

- ⇒ The bolt has been tightened to the torque matching the operating pressure 🔧 torque chart.

8.3 Loosening



WARNING!

Danger of injury from component fracture!

Components or bolted connections may tear while working. The low profile hydraulic wrench may eject at force from the bolting point.

- Stay clear of the low profile hydraulic wrench's longitudinal axis.
- Load low profile hydraulic wrench, attached parts and bolts only up to the permitted maximum torque.
- Also wear an industrial safety helmet for overhead work.

- | | |
|-----------------------|----------------------------|
| Personnel: | ■ User |
| Protective equipment: | ■ Protective work clothing |
| | ■ Safety goggles |
| | ■ Safety gloves |
| | ■ Safety shoes |
| | ■ Industrial safety helmet |



Loosening a bolted connection frequently requires greater torque than originally used to fasten it.

Low profile hydraulic wrench, attached parts and hydraulic power pack must be accordingly approved.

Prerequisites

- The hydraulic power pack is operational and the remote control is within reach.
 - 🔧 Hydraulic power pack operating instructions
- The low profile hydraulic wrench is ready for use.
 - 🔧 Chapter 5 'Preparing the low profile hydraulic wrench' on page 37

Lubrication

Positioning

Starting

- The hydraulic hoses have been connected.
↳ *Chapter 6 'Supplying with energy' on page 40*
- The low profile hydraulic wrench has been braced properly.
↳ *Chapter 7 'Bracing' on page 43*

1. ➤ Ensure that the bearing parts inside the housing are sufficiently lubricated. ↳ *Chapter 9.3 'Lubricating' on page 55*
2. ➤ Carefully position the low profile hydraulic wrench on the bolt head or nut. The bolt head or nut must be completely covered by the tool. Adjust the accessories accordingly.
3. ➤ Ensure correct bracing ↳ *Chapter 7 'Bracing' on page 43.*

4. ➤



WARNING!

Danger of injury from component fracture!

Make sure that there is no one in the low profile hydraulic wrench's or hydraulic power pack's danger zone.

Stay clear of the low profile hydraulic wrench's longitudinal axis.

5. ➤ Switch on the hydraulic power pack using the remote control
↳ hydraulic power pack operating instructions.
⇒ You will hear the sound of the driver being ratcheted over on every return stroke. This indicates that the piston has pulled the ratchet lever back again correctly.
6. ➤ If you cannot hear it ratcheting over, switch off the low profile hydraulic wrench and begin troubleshooting ↳ *Chapter 10 'Troubleshooting' on page 60.*
7. ➤ Keep repeating the loosening operation until the bolted connection has been unfastened.



Depending on the hydraulic power pack, manual and automatic fastening operations may be possible.

↳ *Hydraulic power pack operating instructions*

- ⇒ Loosening is complete when the hydraulic power pack's pressure is close to 0 bar when the tool is turning.



8.4 After use

- Personnel: ■ User
- Protective equipment: ■ Protective work clothing
■ Safety goggles
■ Safety gloves
■ Safety shoes

1. ➤ Switch off the the hydraulic power pack & hydraulic power pack operating instructions.

2. ➤ Disconnect the hydraulic hoses and seal all openings with caps.

3. ➤



ENVIRONMENT!

Danger of pollution from hydraulic oil!

Clean the hydraulic wrench, work area, attached parts and hoses.

Mop up spilled hydraulic oil and lubricants properly and dispose of them responsibly together with the cleaning aids.

9 Performing maintenance

9.1 Maintenance schedule

Improperly performed maintenance tasks



WARNING!

Danger of injury from improperly performed maintenance tasks!

Improper maintenance can cause serious injuries and significant property damage.

- Ensure sufficient assembly space prior to commencing the tasks.
- Ensure that the assembly site is clean and tidy. Loosely stacked or randomly scattered components and tools may cause accidents.
- Have all repairs performed by the manufacturer.
- Use only PLARAD[®] original parts.
- Observe the oil specifications.

Faultless operation

The following sections describe the maintenance tasks that are required in order to ensure optimum and faultless operation.

If routine checks reveal increased wear, shorten the requisite maintenance intervals according to the actual signs of wear. If you have questions about maintenance tasks and intervals, contact PLARAD[®] service.



Interval	Maintenance task	Personnel
Before and after every use	■ Clean. ■ Remove any flash rusting. ■ Check surfaces, warning symbols and pictograms for damage. ■ Check hydraulic hose connections, hose couplings and nipples for damage. ■ Check the impact wrench socket and spring clip for damage and correct operation. ■ Check the bracing plate for damage and correct operation. ■ Check the handle for damage and firm attachment. ■ Check the interchangeable insert, hoses and hose connections for leaks. ■ Check all moving parts for correct operation. 🔗 Chapter 9.2 'Maintenance by the user' on page 54	User
every 20 operating hours	■ Grease joints and running surfaces. 🔗 Chapter 9.3 'Lubricating' on page 55	Qualified low profile hydraulic wrench personnel
Every 3 months ■ In the event of extreme operating conditions (e.g. dust, dirt) ■ In the event of high frequency of use, multi-shift operation ■ In the event of constant work in the upper torque range	■ Check the low profile hydraulic wrench for correct operation and damage and replace any damaged components. ■ Grease all joints and running surfaces. ■ Check the seals for damage and replace them if damaged. ■ Check the slide bearings for damage and replace them if damaged. ■ Calibrate the low profile hydraulic wrench. ■ Check the accessories for damage and replace them if damaged. ■ Exchange damaged markings. 🔗 Chapter 9.4 'Having service tasks performed by the manufacturer' on page 58	PLARAD [®] service
Every 6 months ■ In the event of standard operating conditions ■ In the event of average frequency of use ■ In the event of work in the medium torque range		
Every 12 months ■ In the event of low frequency of use ■ If work is conducted in the low torque range only		

Accessories, spare parts and wear parts

Spare parts must meet the technical requirements specified by PLARAD[®]. This is always ensured by original spare parts. A warranty can only be provided for original spare parts supplied by PLARAD[®].

The installation or use of other spare parts can, under certain circumstances, adversely alter the specified design properties and, consequently, impair active or passive safety.

Any liability and warranty for damage resulting from the use of non-OEM spare parts or accessories is excluded.

Have at least the following information to hand to enable quick and easy processing:

- Client
- Serial number of the low profile hydraulic wrench
- Desired spare part
- Desired quantity
- Desired mode of shipping

🔗 'PLARAD[®] service' on page 5

9.2 Maintenance by the user

Personnel: ■ User

Perform the following maintenance steps before and after every use:

Cleaning

1. ➤



NOTICE!
Damage from improper cleaning!

Clean the hydraulic wrench with a soft cloth. Never use strong cleaning agents, water, brushes, sharp-edged tools or high-pressure cleaners.



WARNING!
Fire hazard!

When using isopropyl alcohol, do not clean the hydraulic wrench near ignition sources. Do not smoke. Let it evaporate.

Surfaces and markings

2. ➤

Check surfaces and markings for damage. Arrange for repairs if there is damage or illegible markings.

Hydraulic hoses

3. ➤

Check the hydraulic hoses and connections for damage and leaks. Replace damaged hydraulic hoses; have damaged connections replaced by PLARAD[®] service.

Never replace them yourself.

Detachable insert

4. ➤

Check the detachable insert, circlip and other accessories for damage, deformation and correct operation. Arrange for exchange if there is damage.

Bracing plate

5. ➤

Check the bracing plate for damage and deformation. Arrange for exchange if there is damage.



Hydraulic wrench

6. ➔



WARNING!

Danger of injury from faulty hydraulic wrench!

Have the faulty hydraulic wrench repaired or get the faulty parts replaced. Contact PLARAD® service.

Transport case

7. ➔

Store the clean, undamaged hydraulic wrench in its transport case until its next use.

9.3 Lubricating

Lubricant

The low profile hydraulic wrench is delivered with lubricant.

Use the following lubricant only:

Component	Lubricant
Lever/piston rod connection	Castrol Tribol GR 3020/1000
Bearing bushings in housing halves, joint	
Hexagon insert bearings	
Driver serration	Kompressol CH 68 hydraulic oil

Further details ➔ lubricant safety data sheet.

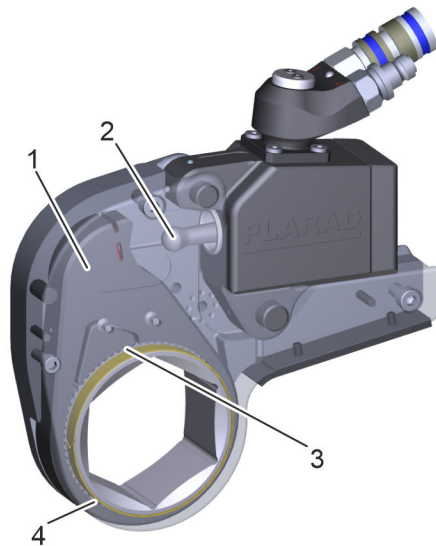


Fig. 22: Lubricating the low profile hydraulic wrench

- 1 Ratchet lever
- 2 Piston rod
- 3 Spring bolt
- 4 Serration

- Personnel: ■ Qualified low profile hydraulic wrench personnel
- Protective equipment: ■ Protective work clothing
■ Safety goggles
■ Safety gloves
■ Safety shoes

The ball head on the piston rod (Fig. 22/2) in the drive engages in a matching ball socket in the ratchet lever (Fig. 22/1), where it is held in place by a spring bolt (Fig. 22/3). All joints and running surfaces require lubrication.

1. ➤ Disconnect the hydraulic hoses.



Fig. 23: Pressing out the fastening pin

- 1 Fastening pin
- 2 Tool for pressing out the fastening pin (e.g. Allen key)

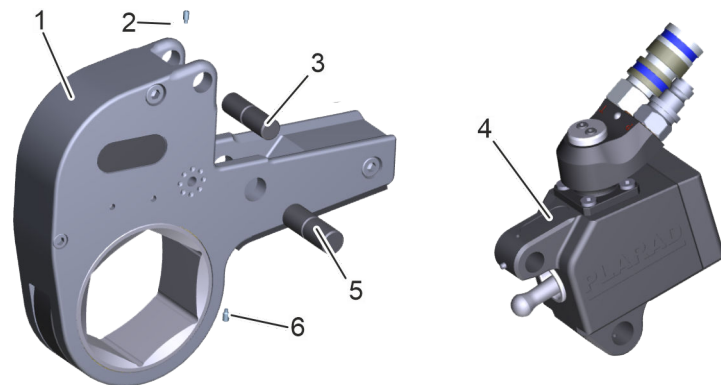


Fig. 24: Connecting the ratchet head and drive unit

- 1 Ratchet head (HSX | HSX1power)
- 2 Stud bolt
- 3 Fastening pin
- 4 Drive unit (SX | SX1power)
- 5 Fastening pin
- 6 Stud bolt

2. ➤ Take off the drive unit. Unfasten the stud bolts (Fig. 24/2 and 6) to do so. Press out the fastening pin (Fig. 24/5) with a suitable tool (Fig. 23).
3. ➤ Swing the drive unit (Fig. 24/4) upwards on the fastening pin (Fig. 24/3).
4. ➤ Press out the fastening pin (Fig. 24/3) with a suitable tool (Fig. 23).
5. ➤ Take off the drive unit (Fig. 24/4).



Opening the ratchet head

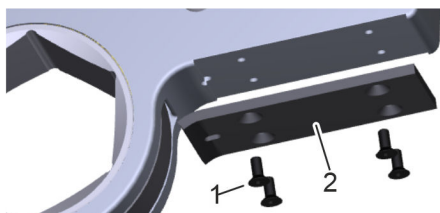


Fig. 25: Removing the bracing plate

6. ➔ Open the ratchet head. To do so, unfasten the bracing plate's four bolts (Fig. 25/1) and take off the bracing plate (Fig. 25/2).



Depending on the version, the bracing plate may consist of multiple parts.

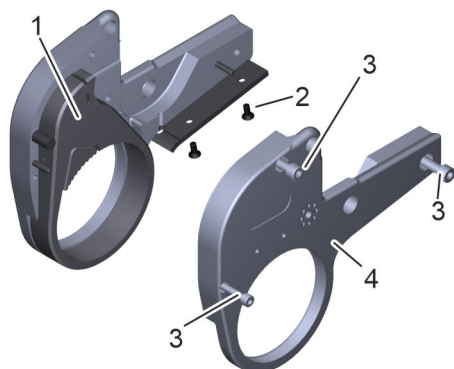


Fig. 26: Ratchet head

7. ➔ Undo the bolts (Fig. 26/3) and take off the cover.
⇒ You can now access the ratchet lever (Fig. 26/1).

Lubricating

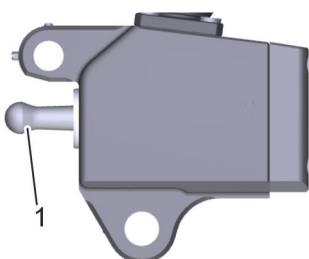


Fig. 27: Piston rod

8. ➔ Lubricate the piston rod's ball head (Fig. 27/1) and the ratchet lever's ball socket (Fig. 28/2). Do so by letting lubricant drip onto the ball head from a grease gun.

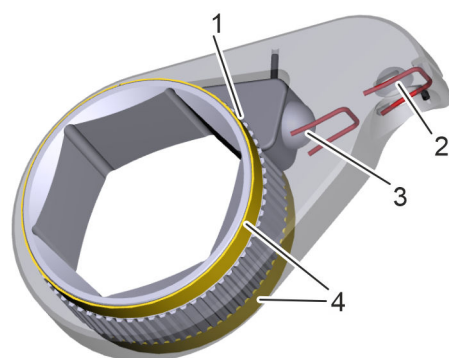


Fig. 28: Ratchet lever

- 1 Hexagon insert serration
- 2 Ball socket: lever/piston rod connection
- 3 Joint

9. ➔ Clean and lubricate the components according to the table below.

Component	Lubricant
Lever/piston rod connection	Castrol Tribol GR 3020/1000
Bearing bushings in housing halves, joint	
Hexagon insert bearings	
Hexagon insert serration	Kompressol CH 68 hydraulic oil

4 Hexagon insert bearings

Assembling

- 10.** Make sure that the ratchet lever is firmly in place in the ratchet head housing. Put the cover back in place and fasten it with the bolts (Fig. 26).
- 11.** Mount the bracing plate and fasten it with the bolts (Fig. 26).
- 12.** Install the drive unit. Push in the fastening pins until they engage. Secure the fastening pins with the stud bolts (Fig. 25).

9.4 Having service tasks performed by the manufacturer

Service intervals

The service intervals are dependent on the conditions of use and the operating site.

Service interval	Conditions
Every 3 months	■ In the event of extreme operating conditions (e.g. dust, dirt) ■ In the event of high frequency of use, multi-shift operation ■ In the event of constant work in the upper torque range ■ In the event of soft fastening operations
Every 6 months	■ In the event of standard operating conditions ■ In the event of average frequency of use ■ In the event of work in the medium torque range
Every 12 months	■ In the event of low frequency of use ■ In the event of work in the low torque range

Contacting service

→  **WARNING!**
Danger of injury from improperly performed service tasks!

Contact PLARAD[®] service in good time regarding the following service tasks.

Do not perform service tasks yourself.

Service tasks

Personnel: ■ PLARAD[®] service

Component	Service task
Accessories	Check for damage; exchange.
	Exchange damaged markings.
Hydraulic wrench	Exchange damaged markings.
	Check for damage, replace damaged components.



Component	Service task
	Recalibrate. Determine characteristics.
	Create torque chart/factory certificate.
	Lubricate and check joints, seals, sliding bearings; replace if damaged.

10 Troubleshooting

10.1 Identifying faults

Malfunctions and faults can become noticeable in different ways:

Fault description	Cause	Remedy	Personnel
Malfunctioning low profile hydraulic wrench	Power supply problems	Connect the hydraulic hoses properly, make sure that the couplings engage correctly. Check and adjust the operating pressure settings. Note the torque chart and the hydraulic power pack's operating instructions.	User
	Insufficient lubrication	Lubricate and clean Chapter 9.3 'Lubricating' on page 55.	Qualified low profile hydraulic wrench personnel
Low profile hydraulic wrench is not working for no apparent reason.	Low profile hydraulic wrench is damaged	Contact 'PLARAD[®] service' on page 5	PLARAD [®] service
	Overloading	Use the low profile hydraulic wrench at up to 75% of its maximum torque power only. Use a more powerful low profile hydraulic wrench.	Qualified low profile hydraulic wrench personnel
	Insufficient power	Check hydraulic hoses, couplings and nipples and have them replaced if damaged.	User
	Serration in low profile hydraulic wrench faulty	Contact 'PLARAD[®] service' on page 5.	PLARAD [®] service
Damage to bracing, bolts, tool or other attached parts	Overloading	Replace damaged components. Reduce the torque. Note the torque chart. Reconfigure bracing.	Qualified low profile hydraulic wrench personnel PLARAD [®] service
Hydraulic hose connection leaking	Hydraulic hose, connection, coupling or nipples faulty	Have faulty components replaced.	PLARAD [®] service



10.2 Performing troubleshooting

Improperly performed troubleshooting



WARNING!

Danger of injury from improperly performed troubleshooting!

Improper troubleshooting can cause serious injuries and significant property damage.

- With regard to maintenance tasks, only allow “Clean” and “Check for damage” to be performed by the user.
- Have all repairs performed by the manufacturer.
- Use only PLARAD[®] original parts.

Device damage

→ Contact ☎ ‘PLARAD[®] service’ on page 5 if there is any damage.

Power supply

1. → Check hydraulic hoses, couplings and nipples and have them replaced if damaged.
2. → Check the hydraulic power pack pressure.

Returning to service after remedying the error



WARNING!

Danger of injury from faulty hydraulic wrench!

An improperly repaired hydraulic wrench can cause serious injuries.

- Never start up a faulty hydraulic wrench again.

11 Disposing of the low profile hydraulic wrench

The low profile hydraulic wrench must be disposed of in an environmentally sound manner at the end of its service life.

Disassembly



WARNING!

Danger of injury from stored residual energy!

Damaged components can cause injuries through undissipated residual energy.

1. ➤ Disconnect the low profile hydraulic wrench from the power supply.
2. ➤ Remove attached parts.
⇒ Reuse these components if necessary.
3. ➤ Do not dismantle the low profile hydraulic wrench any further.

Disposal

Insofar as no take-back or disposal agreement has been put in place, dispose of the low profile hydraulic wrench in accordance with local regulations. Use authorised collection points.



ENVIRONMENT!

Danger of pollution from incorrect disposal!

Incorrect disposal can be hazardous to the environment.

- Dispose of hydraulic oil and objects contaminated with hydraulic oil responsibly. They must not enter the environment.
- If in doubt, obtain information about environmentally sound disposal from the local municipal authority or from specialist disposal companies.



12 Technical data

Technical data sheet



Technical data sheet is available online at: <https://www.plarad.de/download-center.html>

Weight

Dimensions and weight depend on the version. See the technical data sheet for specific values.

Data	Value	Unit
SX SX1power: Weight*	0.7 – 13	kg
HSX HSX1power: Weight*	0.7 – 24.2	kg

* See the rating plate for specific details.

Performance values

Data	Value	Unit
Pressure, maximum*	800	bar
SX SX1power: Torque, maximum	210 – 45000	Nm
HSX HSX1power: Width across flats, maximum	27 – 185	mm

* See the rating plate for specific details.

Ambient conditions

Data	Value	Unit
Temperature range	-20 – 70	°C
Relative humidity, maximum	Non-condensing	

Emissions

Emission levels as per EN 60745

Data	Value	Unit
Emitted sound pressure level	< 70	dB(A)
Measurement uncertainty of emission sound pressure level	3	dB(A)

Hydraulic power pack

The hydraulic power pack chosen as a power supply must meet the following performance data.

Data	Value	Unit
Pressure, maximum	800	bar

Data	Value	Unit
Hydraulic oil	Shell Tellus S2 VX 15	
Oil temperature, maximum	90	°C

Oil specifications

Data	Value
Hydraulic oil	Shell Tellus S2 VX 15
Lubricant	Kompressol CH 68 hydraulic oil
Lubricant	Castrol Tribol GR 3020/1000



13 Index

A

Accessories	16
After use	51
Authorised partners	5

B

Ball joint coupling	13
Brace extension	17
Bracing	16, 43
Bracing situation	
Ideal	44
Inadmissible	44
Brief description	13

C

Case	8
Checking the bracing plate	38
Cleaning	54
Connecting HSX and SX	38
Controls	14
Copyright	4
Customer service	5, 33

D

Delivery	8
Checking	8
Packaging material	9
Scope	8
Determining the particulars of the fastening operation	36
Direction of rotation	47
Disassembly	62
Disposal	62

E

Emissions	63
Environmental protection	35
Hydraulic oil	35
Lubricants	35
Error	60

F

Faults	60
Identifying	60
Rectifying	61
Follow-up order	4

H

Handle	15
Help	33
Hydraulic hose	
Connecting	41
Locking	42
Period of use	41
Hydraulic oil	64

I

Ideal bracing situations	44
Illustration	11
Impact wrench socket	16
Inadmissible bracing situations	44
Inserting tools	27
Intended use	21
Interchangeable inserts	16

L

Lever and ratchet system	13
Loosening	49
Low profile hydraulic wrench	
Disposing	62
Getting to know	11
Preparation	37
Lubricant	55
Lubricating	55

M

Maintenance	52
Cleaning	54
Lubricating	55
Manufacturer	58
Overview	52
User	54

Maintenance schedule	52
Male/female sockets	16
Manufacturer	5
Maschinenfabrik Wagner	5
Misuse	22

N

Noise emissions	63
---------------------------	----

O

Oil specifications	24, 64
Operating	47
Operating conditions	63
Operation	47
Operator	33
Operator's obligations	31
Ordering spare parts	53
Other applicable documents	4

P

Packaging material	9
Performance values	63
Personal protective equipment	33
Personnel	32
Personnel qualifications	32
PLARAD customer service	33
PLARAD service	33
PPE	33
Preparation	37
Purging	42

Q

Qualified low profile hydraulic wrench personnel	32
--	----

R

Rating plate	14
Release shock absorber	13, 30
Residual risks	22
Bracing	25, 26
Breakage	25
Crushing	26
Ejection	25
Ergonomics	28

Exceeding the maximum pressure	23
Hot surfaces	27
Hydraulic oil	23
Moving components	25
Noise	27
Oil specifications	24
Overloading	25
Pressurised hydraulic fluid	23
Rotational movements	25
Spare parts	25
Unsecured or overloaded components	37
Weight	26
Working as a team	47

S

Safety	18
Safety devices	29
Circlip	30
Pressure relief	29
Release shock absorber	30
Service	5, 33
Service tasks	58
Setting the operating pressure	42
Signs	20
Single-hose version	13
Socket	16
Special accessories	17
Stickers	20
Storage	10
Suggestion for improvement	4
Supplying with energy	40
Swapping the hexagon insert	39
Symbols	
In this manual	18
on the low profile hydraulic wrench	20

T

Technical data	63
Tightening	47
Transport	
After operation	10



By hand	9	User	32
Troubleshooting table	60	User requirements	32
U		W	
Unauthorised persons	33	Who can I ask?	33
Unpacking	8		

Appendix



A Castrol – Tribol GR 3020/1000-0 PD

Section 1. Identification

Product name Tribol GR 3020/1000-00 PD
SDS # 468588
Code 468588-DE03

Relevant identified uses of the substance or mixture and uses advised against

Product use Grease for industrial applications
For specific application advice see appropriate Technical Data Sheet or consult our company representative.

Supplier BP Lubricants USA Inc.
1500 Valley Road
Wayne, NJ 07470
Telephone: +1-888-CASTROL

EMERGENCY HEALTH INFORMATION: +1-800-447-8735

EMERGENCY SPILL INFORMATION: +1-800-424-9300 (CHEMTREC USA)
+1-703-527-3887 (CHEMTREC outside the US)

Section 2. Hazards identification

OSHA/HCS status This material is not considered hazardous by the OSHA Hazard Communication Standard (29 CFR 1910.1200).

Classification of the substance or mixture Not classified.

GHS label elements

Signal word No signal word.

Hazard statements No known significant effects or critical hazards.

Precautionary statements

Prevention Not applicable.

Response Not applicable.

Storage Not applicable.

Disposal Not applicable.

Hazards not otherwise classified None known.

Section 3. Composition/information on ingredients

Substance/mixture Mixture
Highly refined mineral oil and additives. Thickening agent.

Ingredient name	CAS number	%
Distillates (petroleum), hydrotreated heavy naphthenic	64742-52-5	≥75 - ≤90
Benzenesulfonic acid, di-C10-18-alkyl derivatives, calcium salts	93820-57-6	≤3
Molybdenum, bis(dibutylcarbamodithioato)di-μ-oxodioxodi-, sulfurized	68412-26-0	≤3

Any concentration shown as a range is to protect confidentiality or is due to batch variation.

There are no additional ingredients present which, within the current knowledge of the supplier and in the concentrations applicable, are classified as hazardous to health and hence require reporting in this section.

Product name Tribol GR 3020/1000-00 PD

Product code 468588-DE03

Page: 1/8

Version 4 **Date of issue** 01/04/2022.

Format CCSA

Language ENGLISH

Section 3. Composition/information on ingredients

Occupational exposure limits, if available, are listed in Section 8.

Section 4. First aid measures

Description of necessary first aid measures

Eye contact	In case of contact, immediately flush eyes with plenty of water for at least 15 minutes. Eyelids should be held away from the eyeball to ensure thorough rinsing. Check for and remove any contact lenses. Get medical attention.
Skin contact	Wash skin thoroughly with soap and water or use recognized skin cleanser. Remove contaminated clothing and shoes. Wash clothing before reuse. Clean shoes thoroughly before reuse. Get medical attention if symptoms occur.
Inhalation	If inhaled, remove to fresh air. In case of inhalation of decomposition products in a fire, symptoms may be delayed. The exposed person may need to be kept under medical surveillance for 48 hours. Get medical attention if symptoms occur.
Ingestion	Do not induce vomiting unless directed to do so by medical personnel. Get medical attention if symptoms occur.
Protection of first-aiders	No action shall be taken involving any personal risk or without suitable training.

Most important symptoms/effects, acute and delayed

See Section 11 for more detailed information on health effects and symptoms.

Indication of immediate medical attention and special treatment needed, if necessary

Notes to physician	Treatment should in general be symptomatic and directed to relieving any effects. In case of inhalation of decomposition products in a fire, symptoms may be delayed. The exposed person may need to be kept under medical surveillance for 48 hours. Note: High Pressure Applications Injections through the skin resulting from contact with the product at high pressure constitute a major medical emergency. Injuries may not appear serious at first but within a few hours tissue becomes swollen, discolored and extremely painful with extensive subcutaneous necrosis. Surgical exploration should be undertaken without delay. Thorough and extensive debridement of the wound and underlying tissue is necessary to minimize tissue loss and prevent or limit permanent damage. Note that high pressure may force the product considerable distances along tissue planes.
Specific treatments	No specific treatment.

Section 5. Fire-fighting measures

Extinguishing media

Suitable extinguishing media	In case of fire, use water fog, alcohol resistant foam, dry chemical or carbon dioxide extinguisher or spray.
Unsuitable extinguishing media	Do not use water jet.

Specific hazards arising from the chemical	No specific fire or explosion hazard.
---	---------------------------------------

Hazardous combustion products	 Combustion products may include the following: metal oxide/oxides carbon oxides (CO, CO ₂) (carbon monoxide, carbon dioxide) sulfur oxides (SO, SO ₂ etc.) nitrogen oxides (NO, NO ₂ etc.)
--------------------------------------	--

Special protective actions for fire-fighters	No action shall be taken involving any personal risk or without suitable training. Promptly isolate the scene by removing all persons from the vicinity of the incident if there is a fire.
Special protective equipment for fire-fighters	Fire-fighters should wear positive pressure self-contained breathing apparatus (SCBA) and full turnout gear.

Product name Tribol GR 3020/1000-00 PD

Product code 468588-DE03

Page: 2/8

Version 4 **Date of issue** 01/04/2022.

Format CCSA

Language ENGLISH

Section 6. Accidental release measures

Personal precautions, protective equipment and emergency procedures

For non-emergency personnel

No action shall be taken involving any personal risk or without suitable training. Evacuate surrounding areas. Keep unnecessary and unprotected personnel from entering. Do not touch or walk through spilled material. Put on appropriate personal protective equipment. Floors may be slippery; use care to avoid falling.

For emergency responders

If specialized clothing is required to deal with the spillage, take note of any information in Section 8 on suitable and unsuitable materials. See also the information in "For non-emergency personnel".

Environmental precautions

Avoid dispersal of spilled material and runoff and contact with soil, waterways, drains and sewers. Inform the relevant authorities if the product has caused environmental pollution (sewers, waterways, soil or air).

Methods and materials for containment and cleaning up

Small spill

Move containers from spill area. Vacuum or sweep up material and place in a designated, labeled waste container. Dispose of via a licensed waste disposal contractor.

Large spill

Move containers from spill area. Approach release from upwind. Prevent entry into sewers, water courses, basements or confined areas. Vacuum or sweep up material and place in a designated, labeled waste container. Avoid creating dusty conditions and prevent wind dispersal. If emergency personnel are unavailable, contain spilled material. Suction or scoop the spill into appropriate disposal or recycling vessels, then cover spill area with oil absorbent. Dispose of via a licensed waste disposal contractor.

Section 7. Handling and storage

Precautions for safe handling

Protective measures

Put on appropriate personal protective equipment (see Section 8).

Advice on general occupational hygiene

Eating, drinking and smoking should be prohibited in areas where this material is handled, stored and processed. Wash thoroughly after handling. Remove contaminated clothing and protective equipment before entering eating areas. See also Section 8 for additional information on hygiene measures.

Conditions for safe storage, including any incompatibilities

Store in accordance with local regulations. Store in original container protected from direct sunlight in a dry, cool and well-ventilated area, away from incompatible materials (see Section 10) and food and drink. Keep away from heat and direct sunlight. Keep container tightly closed and sealed until ready for use. Store and use only in equipment/containers designed for use with this product. Containers that have been opened must be carefully resealed and kept upright to prevent leakage. Do not store in unlabeled containers. Use appropriate containment to avoid environmental contamination.

Section 8. Exposure controls/personal protection

Control parameters

Occupational exposure limits

Ingredient name	Exposure limits
Distillates (petroleum), hydrotreated heavy naphthenic	ACGIH TLV (United States). TWA: 5 mg/m ³ 8 hours. Issued/Revised: 11/2009 Form: Inhalable fraction OSHA PEL (United States). TWA: 5 mg/m ³ 8 hours. Issued/Revised: 6/1993
Benzenesulfonic acid, di-C10-18-alkyl derivatives, calcium salts	None.
Molybdenum, bis(dibutylcarbamodithioato)di-μ-oxodioxodi-, sulfurized	ACGIH TLV (United States). TWA: 10 mg/m ³ , (as Mo) 8 hours. Issued/Revised: 2/2001 Form: Inhalable fraction TWA: 3 mg/m ³ , (as Mo) 8 hours. Issued/Revised: 2/2001 Form: Respirable fraction OSHA PEL (United States).

Product name Tribol GR 3020/1000-00 PD

Product code 468588-DE03

Page: 3/8

Version 4 **Date of issue** 01/04/2022.

Format CCSA

Language ENGLISH

Section 8. Exposure controls/personal protection

TWA: 15 mg/m³, (as Mo) 8 hours. Issued/
Revised: 6/1993 Form: Total dust

While specific OELs for certain components may be shown in this section, other components may be present in any mist, vapor or dust produced. Therefore, the specific OELs may not be applicable to the product as a whole and are provided for guidance only.

Appropriate engineering controls

All activities involving chemicals should be assessed for their risks to health, to ensure exposures are adequately controlled. Personal protective equipment should only be considered after other forms of control measures (e.g. engineering controls) have been suitably evaluated. Personal protective equipment should conform to appropriate standards, be suitable for use, be kept in good condition and properly maintained. Your supplier of personal protective equipment should be consulted for advice on selection and appropriate standards. For further information contact your national organisation for standards.

Provide exhaust ventilation or other engineering controls to keep the relevant airborne concentrations below their respective occupational exposure limits.

The final choice of protective equipment will depend upon a risk assessment. It is important to ensure that all items of personal protective equipment are compatible.

Environmental exposure controls

Emissions from ventilation or work process equipment should be checked to ensure they comply with the requirements of environmental protection legislation. In some cases, fume scrubbers, filters or engineering modifications to the process equipment will be necessary to reduce emissions to acceptable levels.

Individual protection measures

Hygiene measures

Wash hands, forearms and face thoroughly after handling chemical products, before eating, smoking and using the lavatory and at the end of the working period. Appropriate techniques should be used to remove potentially contaminated clothing. Wash contaminated clothing before reusing. Ensure that eyewash stations and safety showers are close to the workstation location.

Eye/face protection

Safety glasses with side shields.

Skin protection

Hand protection

Wear protective gloves if prolonged or repeated contact is likely. Wear chemical resistant gloves. Recommended: Nitrile gloves. The correct choice of protective gloves depends upon the chemicals being handled, the conditions of work and use, and the condition of the gloves (even the best chemically resistant glove will break down after repeated chemical exposures). Most gloves provide only a short time of protection before they must be discarded and replaced. Because specific work environments and material handling practices vary, safety procedures should be developed for each intended application. Gloves should therefore be chosen in consultation with the supplier/manufacturer and with a full assessment of the working conditions.

Body protection

Use of protective clothing is good industrial practice.

Personal protective equipment for the body should be selected based on the task being performed and the risks involved and should be approved by a specialist before handling this product.

Cotton or polyester/cotton overalls will only provide protection against light superficial contamination that will not soak through to the skin. Overalls should be laundered on a regular basis. When the risk of skin exposure is high (e.g. when cleaning up spillages or if there is a risk of splashing) then chemical resistant aprons and/or impervious chemical suits and boots will be required.

Other skin protection

Appropriate footwear and any additional skin protection measures should be selected based on the task being performed and the risks involved and should be approved by a specialist before handling this product.

Respiratory protection

In case of insufficient ventilation, wear suitable respiratory equipment.

For protection against metal working fluids, respiratory protection that is classified as "resistant to oil" (class R) or oil proof (class P) should be selected where appropriate. Depending on the level of airborne contaminants, an air-purifying, half-mask respirator (with HEPA filter) including disposable (P- or R-series) (for oil mists less than 50mg/m³), or any powered, air-purifying respirator equipped with hood or helmet and HEPA filter (for oil mists less than 125 mg/m³).

Where organic vapours are a potential hazard during metalworking operations, a combination particulate and organic vapour filter may be necessary.

The correct choice of respiratory protection depends upon the chemicals being handled,

Product name Tribol GR 3020/1000-00 PD

Product code 468588-DE03

Page: 4/8

Version 4 **Date of issue** 01/04/2022.

Format CCSA

Language ENGLISH

Section 8. Exposure controls/personal protection

the conditions of work and use, and the condition of the respiratory equipment. Safety procedures should be developed for each intended application. Respiratory protection equipment should therefore be chosen in consultation with the supplier/manufacturer and with a full assessment of the working conditions.

Section 9. Physical and chemical properties

The conditions of measurement of all properties are at standard temperature and pressure unless otherwise indicated.

Appearance

Physical state	Grease
Color	Yellow.
Odor	Not available.
Odor threshold	Not available.
pH	Not applicable.
Melting point/freezing point	Not available.
Boiling point, initial boiling point, and boiling range	Not available.
Flash point	Closed cup: 226°C (438.8°F) [Estimated. Based on Lubricants - Base Oils]
Evaporation rate	Not available.
Flammability	Not applicable. Based on - Physical state
Lower and upper explosion limit/flammability limit	Not applicable.
Vapor pressure	Not available.
Relative vapor density	Not applicable.
Density	<1000 kg/m ³ (<1 g/cm ³) at 20°C
Solubility	insoluble in water.
Partition coefficient: n-octanol/water	Not applicable.
Auto-ignition temperature	Not applicable.
Decomposition temperature	Not available.
Viscosity	Not available.
Particle characteristics	
Median particle size	Not available.

Section 10. Stability and reactivity

Reactivity	No specific test data available for this product. Refer to Conditions to avoid and Incompatible materials for additional information.
Chemical stability	The product is stable.
Possibility of hazardous reactions	Under normal conditions of storage and use, hazardous reactions will not occur. Under normal conditions of storage and use, hazardous polymerization will not occur.
Conditions to avoid	Avoid all possible sources of ignition (spark or flame).
Incompatible materials	Reactive or incompatible with the following materials: oxidizing materials.
Hazardous decomposition products	Under normal conditions of storage and use, hazardous decomposition products should not be produced.

Product name Tribol GR 3020/1000-00 PD

Product code 468588-DE03

Page: 5/8

Version 4 Date of issue 01/04/2022.

Format CCSA

Language ENGLISH

Section 11. Toxicological information

Information on toxicological effects

Information on the likely routes of exposure

Routes of entry anticipated: Dermal, Inhalation.

Potential acute health effects

Eye contact

No known significant effects or critical hazards.

Skin contact

No known significant effects or critical hazards.

Inhalation

Exposure to decomposition products may cause a health hazard. Serious effects may be delayed following exposure.

Ingestion

No known significant effects or critical hazards.

Symptoms related to the physical, chemical and toxicological characteristics

Eye contact

No specific data.

Skin contact

Adverse symptoms may include the following:
irritation
dryness
cracking

Inhalation

No specific data.

Ingestion

No specific data.

Delayed and immediate effects and also chronic effects from short and long term exposure

Short term exposure

Potential immediate effects

Not available.

Potential delayed effects

Not available.

Long term exposure

Potential immediate effects

Not available.

Potential delayed effects

Not available.

Potential chronic health effects

General

No known significant effects or critical hazards.

Carcinogenicity

No known significant effects or critical hazards.

Mutagenicity

No known significant effects or critical hazards.

Teratogenicity

No known significant effects or critical hazards.

Developmental effects

No known significant effects or critical hazards.

Fertility effects

No known significant effects or critical hazards.

Numerical measures of toxicity

Acute toxicity estimates

Not available.

Section 12. Ecological information

Toxicity

No testing has been performed by the manufacturer.

Persistence and degradability

Not expected to be rapidly degradable.

Bioaccumulative potential

Product name Tribol GR 3020/1000-00 PD

Product code 468588-DE03

Page: 6/8

Version 4 **Date of issue** 01/04/2022.

Format CCSA

Language ENGLISH

Section 12. Ecological information

Not available.

Mobility in soil

Soil/water partition
coefficient (K_{oc})

Not available.

Mobility

Grease. insoluble in water.

Other adverse effects

No known significant effects or critical hazards.

Section 13. Disposal considerations

Disposal methods

The generation of waste should be avoided or minimized wherever possible. Significant quantities of waste product residues should not be disposed of via the foul sewer but processed in a suitable effluent treatment plant. Dispose of surplus and non-recyclable products via a licensed waste disposal contractor. Disposal of this product, solutions and any by-products should at all times comply with the requirements of environmental protection and waste disposal legislation and any regional local authority requirements. Waste packaging should be recycled. Incineration or landfill should only be considered when recycling is not feasible. This material and its container must be disposed of in a safe way. Empty containers or liners may retain some product residues. Avoid dispersal of spilled material and runoff and contact with soil, waterways, drains and sewers.

Section 14. Transport information

	DOT Classification	TDG Classification	IMDG	IATA
UN number	Not regulated.	Not regulated.	Not regulated.	Not regulated.
UN proper shipping name	-	-	-	-
Transport hazard class(es)	-	-	-	-
Packing group	-	-	-	-
Environmental hazards	No.	No.	No.	No.
Additional information	-	-	-	-

Special precautions for user

Not available.

Transport in bulk according to IMO instruments

Not available.

Section 15. Regulatory information

U.S. Federal regulations

United States inventory
(TSCA 8b)

All components are active or exempted.

Other regulations

Australia inventory (AIC)

All components are listed or exempted.

Canada inventory

At least one component is not listed in DSL but all such components are listed in NDSL.

China inventory (IECSC)

All components are listed or exempted.

Japan inventory (CSCL)

At least one component is not listed.

Korea inventory (KECI)

All components are listed or exempted.

Product name Tribol GR 3020/1000-00 PD

Product code 468588-DE03

Page: 7/8

Version 4 Date of issue 01/04/2022.

Format CCSA

Language ENGLISH

Section 15. Regulatory information

Philippines inventory (PICCS)	At least one component is not listed.
Taiwan Chemical Substances Inventory (TCSI)	All components are listed or exempted.
REACH Status	The company, as identified in Section 1, sells this product in the EU in compliance with the current requirements of REACH.

Section 16. Other information

History

Date of issue/Date of revision 01/04/2022.

Date of previous issue 06/23/2021.

Prepared by Product Stewardship

Key to abbreviations

ACGIH = American Conference of Industrial Hygienists
ATE = Acute Toxicity Estimate
BCF = Bioconcentration Factor
CAS Number = Chemical Abstracts Service Registry Number
GHS = Globally Harmonized System of Classification and Labelling of Chemicals
IATA = International Air Transport Association
IBC = Intermediate Bulk Container
IMDG = International Maritime Dangerous Goods
LogPow = logarithm of the octanol/water partition coefficient
MARPOL = International Convention for the Prevention of Pollution From Ships, 1973 as modified by the Protocol of 1978. ("Marpol" = marine pollution)
OEL = Occupational Exposure Limit
SDS = Safety Data Sheet
STEL = Short term exposure limit
TWA = Time weighted average
UN = United Nations
UN Number = United Nations Number, a four digit number assigned by the United Nations Committee of Experts on the Transport of Dangerous Goods.
Varies = may contain one or more of the following 64741-88-4, 64741-89-5, 64741-95-3, 64741-96-4, 64742-01-4, 64742-44-5, 64742-45-6, 64742-52-5, 64742-53-6, 64742-54-7, 64742-55-8, 64742-56-9, 64742-57-0, 64742-58-1, 64742-62-7, 64742-63-8, 64742-65-0, 64742-70-7, 72623-85-9, 72623-86-0, 72623-87-1

Indicates information that has changed from previously issued version.

Notice to reader

All reasonably practicable steps have been taken to ensure this data sheet and the health, safety and environmental information contained in it is accurate as of the date specified below. No warranty or representation, express or implied is made as to the accuracy or completeness of the data and information in this data sheet.

The data and advice given apply when the product is sold for the stated application or applications. You should not use the product other than for the stated application or applications without seeking advice from BP Group.

It is the user's obligation to evaluate and use this product safely and to comply with all applicable laws and regulations. The BP Group shall not be responsible for any damage or injury resulting from use, other than the stated product use of the material, from any failure to adhere to recommendations, or from any hazards inherent in the nature of the material. Purchasers of the product for supply to a third party for use at work, have a duty to take all necessary steps to ensure that any person handling or using the product is provided with the information in this sheet. Employers have a duty to tell employees and others who may be affected of any hazards described in this sheet and of any precautions that should be taken. You can contact the BP Group to ensure that this document is the most current available. Alteration of this document is strictly prohibited.

Product name Tribol GR 3020/1000-00 PD

Product code 468588-DE03

Page: 8/8

Version 4 Date of issue 01/04/2022.

Format CCSA

Language ENGLISH

B Kompressol CH 68 hydraulic oil

CH 68 Hydraulikoel

Safety Data Sheet

according to the REACH Regulation (EC) 1907/2006 amended by Regulation (EU) 2020/878
Issue date: 9-5-2018 Revision date: 19-9-2022 Supersedes version of: 22-5-2019 Version: 1.2

SECTION 1: Identification of the substance/mixture and of the company/undertaking

1.1. Product identifier

Product form : Mixture
Trade name : CH 68 Hydraulikoel
Product group : Trade product

1.2. Relevant identified uses of the substance or mixture and uses advised against

1.2.1. Relevant identified uses

Main use category : Industrial use, Professional use, Consumer use
Use of the substance/mixture : Hydraulic oil
Function or use category : Hydraulic fluids and additives

1.2.2. Uses advised against

No additional information available

1.3. Details of the supplier of the safety data sheet

Kompressol Oel Verkaufs GmbH.
Merheimer Strasse 121

50733 Köln

T 0049 (0) 221 768079 0

info@kompressol.de

1.4. Emergency telephone number

Country	Organisation/Company	Address	Emergency number	Comment
Ireland	National Poisons Information Centre Beaumont Hospital	PO Box 1297 Beaumont Road 9 Dublin	+353 1 809 2566 (Healthcare professionals- 24/7) +353 1 809 2166 (public, 8am - 10pm, 7/7)	
United Kingdom	National Poisons Information Service (Cardiff Centre) University Hospital Llandough	Penlan Road CF64 2XX Llandough	0344 892 0111	Only for healthcare professionals

SECTION 2: Hazards identification

2.1. Classification of the substance or mixture

Classification according to Regulation (EC) No. 1272/2008 [CLP]

Not classified

Adverse physicochemical, human health and environmental effects

To our knowledge, this product does not present any particular risk, provided it is handled in accordance with good occupational hygiene and safety practice.

2.2. Label elements

Labelling according to Regulation (EC) No. 1272/2008 [CLP]

No labelling applicable

CH 68 Hydraulikoel

Safety Data Sheet

according to the REACH Regulation (EC) 1907/2006 amended by Regulation (EU) 2020/878

2.3. Other hazards

Contains no PBT/vPvB substances $\geq 0.1\%$ assessed in accordance with REACH Annex XIII

The mixture does not contain substance(s) included in the list established in accordance with Article 59(1) of REACH for having endocrine disrupting properties, or is not identified as having endocrine disrupting properties in accordance with the criteria set out in Commission Delegated Regulation (EU) 2017/2100 or Commission Regulation (EU) 2018/605 at a concentration equal to or greater than 0,1 %

SECTION 3: Composition/information on ingredients

3.1. Substances

Not applicable

3.2. Mixtures

Comments : Highly refined mineral oils and additives.

Comments : The highly refined mineral oil contains <3% (w/w) DMSOextract, according to IP346.

This mixture does not contain any substances to be mentioned according to the criteria of section 3.2 of REACH Annex II

SECTION 4: First aid measures

4.1. Description of first aid measures

First-aid measures after inhalation	: Remove person to fresh air and keep comfortable for breathing.
First-aid measures after skin contact	: Wash skin with plenty of water.
First-aid measures after eye contact	: Rinse eyes with water as a precaution.
First-aid measures after ingestion	: Call a poison center or a doctor if you feel unwell.

4.2. Most important symptoms and effects, both acute and delayed

Symptoms/effects : No additional information available.

4.3. Indication of any immediate medical attention and special treatment needed

Treat symptomatically.

SECTION 5: Firefighting measures

5.1. Extinguishing media

Suitable extinguishing media	: Water spray. Dry powder. Foam. Carbon dioxide.
Unsuitable extinguishing media	: Do not use a heavy water stream.

5.2. Special hazards arising from the substance or mixture

Fire hazard	: Combustible liquid.
Hazardous decomposition products in case of fire	: Toxic fumes may be released. Incomplete combustion releases dangerous carbon monoxide, carbon dioxide and other toxic gases.

5.3. Advice for firefighters

Protection during firefighting	: Do not attempt to take action without suitable protective equipment. Self-contained breathing apparatus. Complete protective clothing.
--------------------------------	--

SECTION 6: Accidental release measures

6.1. Personal precautions, protective equipment and emergency procedures

6.1.1. For non-emergency personnel

Emergency procedures	: Ventilate spillage area.
----------------------	----------------------------

CH 68 Hydraulikoel

Safety Data Sheet

according to the REACH Regulation (EC) 1907/2006 amended by Regulation (EU) 2020/878

6.1.2. For emergency responders

Protective equipment : Do not attempt to take action without suitable protective equipment. For further information refer to section 8: "Exposure controls/personal protection".

6.2. Environmental precautions

Avoid release to the environment.

6.3. Methods and material for containment and cleaning up

Methods for cleaning up : Take up liquid spill into absorbent material.
Other information : Dispose of materials or solid residues at an authorized site.

6.4. Reference to other sections

For further information refer to section 13.

SECTION 7: Handling and storage

7.1. Precautions for safe handling

Precautions for safe handling : Provide good ventilation in process area to prevent formation of vapour.
Hygiene measures : Wash hands and other exposed areas with mild soap and water before eating, drinking or smoking and when leaving work.

7.2. Conditions for safe storage, including any incompatibilities

Storage conditions : Keep container closed when not in use. Keep in a cool, well-ventilated place away from heat.
Storage temperature : 0 - 40 °C

7.3. Specific end use(s)

No additional information available

SECTION 8: Exposure controls/personal protection

8.1. Control parameters

8.1.1 National occupational exposure and biological limit values

CH 68 Hydraulikoel	
EU - Indicative Occupational Exposure Limit (IOEL)	
Exposure limits/standards for materials that can be formed when handling this product. When mists/aerosols can occur the following is recommended	5 mg/m ³ - ACGIH TLV (inhalable fraction).

8.1.2. Recommended monitoring procedures

No additional information available

8.1.3. Air contaminants formed

No additional information available

8.1.4. DNEL and PNEC

No additional information available

8.1.5. Control banding

No additional information available

CH 68 Hydraulikoel

Safety Data Sheet

according to the REACH Regulation (EC) 1907/2006 amended by Regulation (EU) 2020/878

8.2. Exposure controls

8.2.1. Appropriate engineering controls

Appropriate engineering controls:
Ensure good ventilation of the work station.

8.2.2. Personal protection equipment

Personal protective equipment symbol(s):



8.2.2.1. Eye and face protection

Eye protection:
Safety glasses

Eye protection			
Type	Field of application	Characteristics	Standard
Safety glasses	Droplet	clear	EN 166

8.2.2.2. Skin protection

Skin and body protection:
Wear suitable protective clothing

Hand protection:
Protective gloves

Hand protection					
Type	Material	Permeation	Thickness (mm)	Penetration	Standard
Reusable gloves	Nitrile rubber (NBR)	6 (> 480 minutes)	≥0.35		EN ISO 374

Other skin protection

Materials for protective clothing:
Wear suitable protective clothing

8.2.2.3. Respiratory protection

Respiratory protection:
In case of insufficient ventilation, wear suitable respiratory equipment

8.2.2.4. Thermal hazards

No additional information available

8.2.3. Environmental exposure controls

Environmental exposure controls:
Avoid release to the environment.

SECTION 9: Physical and chemical properties

9.1. Information on basic physical and chemical properties

Physical state	: Liquid
Colour	: Yellow.
Odour	: characteristic.
Odour threshold	: Not available
Melting point	: Not applicable

CH 68 Hydraulikoel

Safety Data Sheet

according to the REACH Regulation (EC) 1907/2006 amended by Regulation (EU) 2020/878

Freezing point	: -24 °C - ASTM D5950 (pour point)
Boiling point	: Not available
Flammability	: Not applicable
Explosive properties	: Presents no particular fire or explosion hazard.
Explosive limits	: Not available
Lower explosion limit	: Not available
Upper explosion limit	: Not available
Flash point	: 220 °C - ASTM D92 (COC)
Auto-ignition temperature	: Not available
Decomposition temperature	: Not available
pH	: Not available
Viscosity, kinematic	: 68 mm²/s (40 °C) - ASTM D7279
Solubility	: Water: Insoluble / Slightly miscible
Partition coefficient n-octanol/water (Log Kow)	: Not available
Vapour pressure	: Not available
Vapour pressure at 50 °C	: Not available
Density	: 0,876 kg/l (15 °C) - ASTM D4052
Relative density	: Not available
Relative vapour density at 20 °C	: Not available
Particle characteristics	: Not applicable

9.2. Other information

9.2.1. Information with regard to physical hazard classes

No additional information available

9.2.2. Other safety characteristics

VOC content : 0 %

SECTION 10: Stability and reactivity

10.1. Reactivity

The product is non-reactive under normal conditions of use, storage and transport.

10.2. Chemical stability

Stable under normal conditions.

10.3. Possibility of hazardous reactions

No dangerous reactions known under normal conditions of use. Reacts violently with (strong) oxidizers.

10.4. Conditions to avoid

None under recommended storage and handling conditions (see section 7).

10.5. Incompatible materials

No additional information available

10.6. Hazardous decomposition products

No decomposition if stored normally.

SECTION 11: Toxicological information

11.1. Information on hazard classes as defined in Regulation (EC) No 1272/2008

Acute toxicity (oral)	: Not classified
Acute toxicity (dermal)	: Not classified
Acute toxicity (inhalation)	: Not classified
Skin corrosion/irritation	: Not classified
Serious eye damage/irritation	: Not classified

CH 68 Hydraulikoel

Safety Data Sheet

according to the REACH Regulation (EC) 1907/2006 amended by Regulation (EU) 2020/878

Respiratory or skin sensitisation	: Not classified
Germ cell mutagenicity	: Not classified
Carcinogenicity	: Not classified
Reproductive toxicity	: Not classified
STOT-single exposure	: Not classified
STOT-repeated exposure	: Not classified
Aspiration hazard	: Not classified

CH 68 Hydraulikoel

Viscosity, kinematic	68 mm ² /s (40 °C) - ASTM D7279
----------------------	--

11.2. Information on other hazards

No additional information available

SECTION 12: Ecological information

12.1. Toxicity

Ecology - general	: The product is not considered harmful to aquatic organisms nor to cause long-term adverse effects in the environment.
Hazardous to the aquatic environment, short-term (acute)	: Not classified
Hazardous to the aquatic environment, long-term (chronic)	: Not classified
Not rapidly degradable	

12.2. Persistence and degradability

No additional information available

12.3. Bioaccumulative potential

No additional information available

12.4. Mobility in soil

No additional information available

12.5. Results of PBT and vPvB assessment

No additional information available

12.6. Endocrine disrupting properties

No additional information available

12.7. Other adverse effects

No additional information available

SECTION 13: Disposal considerations

13.1. Waste treatment methods

Waste treatment methods	: Do not allow into drains or water courses. Dispose of contents/container in accordance with licensed collector's sorting instructions.
Product/Packaging disposal recommendations	: Dispose in a safe manner in accordance with local/national regulations.
European List of Waste (LoW) code	: 13 01 10* - mineral based non-chlorinated hydraulic oils

SECTION 14: Transport information

In accordance with ADR / IMDG / IATA / ADN / RID

CH 68 Hydraulikoel

Safety Data Sheet

according to the REACH Regulation (EC) 1907/2006 amended by Regulation (EU) 2020/878

ADR	IMDG	IATA	ADN	RID
14.1. UN number or ID number				
Not applicable	Not applicable	Not applicable	Not applicable	Not applicable
14.2. UN proper shipping name				
Not applicable	Not applicable	Not applicable	Not applicable	Not applicable
14.3. Transport hazard class(es)				
Not applicable	Not applicable	Not applicable	Not applicable	Not applicable
14.4. Packing group				
Not applicable	Not applicable	Not applicable	Not applicable	Not applicable
14.5. Environmental hazards				
Not applicable	Not applicable	Not applicable	Not applicable	Not applicable
No supplementary information available				

14.6. Special precautions for user

Overland transport
Not applicable

Transport by sea
Not applicable

Air transport
Not applicable

Inland waterway transport
Not applicable

Rail transport
Not applicable

14.7. Maritime transport in bulk according to IMO instruments

Not applicable

SECTION 15: Regulatory information

15.1. Safety, health and environmental regulations/legislation specific for the substance or mixture

15.1.1. EU-Regulations

REACH Annex XVII (Restriction List)

Contains no REACH substances with Annex XVII restrictions

REACH Annex XIV (Authorisation List)

Contains no REACH Annex XIV substances

REACH Candidate List (SVHC)

Contains no substance on the REACH candidate list

PIC Regulation (Prior Informed Consent)

Contains no substance subject to Regulation (EU) No 649/2012 of the European Parliament and of the Council of 4 July 2012 concerning the export and import of hazardous chemicals.

CH 68 Hydraulikoel

Safety Data Sheet

according to the REACH Regulation (EC) 1907/2006 amended by Regulation (EU) 2020/878

POP Regulation (Persistent Organic Pollutants)

Contains no substance subject to Regulation (EU) No 2019/1021 of the European Parliament and of the Council of 20 June 2019 on persistent organic pollutants

Ozone Regulation (1005/2009)

Contains no substance subject to REGULATION (EU) No 1005/2009 OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 16 September 2009 on substances that deplete the ozone layer.

VOC Directive (2004/42)

VOC content : 0 %

Explosives Precursors Regulation (2019/1148)

Contains no substance subject to Regulation (EU) 2019/1148 of the European Parliament and of the Council of 20 June 2019 on the marketing and use of explosives precursors.

Drug Precursors Regulation (273/2004)

Contains no substance(s) listed on the Drug Precursors list (Regulation EC 273/2004 on drug precursors)

15.1.2. National regulations

No additional information available

15.2. Chemical safety assessment

No chemical safety assessment has been carried out

SECTION 16: Other information

Indication of changes			
Section	Changed item	Change	Comments
	Revision date	Modified	
	Supersedes	Modified	
1.2	Function or use category	Added	
1.2	Use of the substance/mixture	Added	
4.1	First-aid measures after ingestion	Modified	
4.2	Symptoms/effects	Modified	
9.1	Solubility in water	Added	
13.1	H code	Added	
16	Abbreviations and acronyms	Modified	

Abbreviations and acronyms:

ADN	European Agreement concerning the International Carriage of Dangerous Goods by Inland Waterways
ADR	European Agreement concerning the International Carriage of Dangerous Goods by Road
ATE	Acute Toxicity Estimate
BCF	Bioconcentration factor
BLV	Biological limit value
BOD	Biochemical oxygen demand (BOD)
COD	Chemical oxygen demand (COD)
DMEL	Derived Minimal Effect level
DNEL	Derived-No Effect Level
EC-No.	European Community number

CH 68 Hydraulikoel

Safety Data Sheet

according to the REACH Regulation (EC) 1907/2006 amended by Regulation (EU) 2020/878

Abbreviations and acronyms:	
EC50	Median effective concentration
EN	European Standard
IARC	International Agency for Research on Cancer
IATA	International Air Transport Association
IMDG	International Maritime Dangerous Goods
LC50	Median lethal concentration
LD50	Median lethal dose
LOAEL	Lowest Observed Adverse Effect Level
NOAEC	No-Observed Adverse Effect Concentration
NOAEL	No-Observed Adverse Effect Level
NOEC	No-Observed Effect Concentration
OECD	Organisation for Economic Co-operation and Development
OEL	Occupational Exposure Limit
PBT	Persistent Bioaccumulative Toxic
PNEC	Predicted No-Effect Concentration
RID	Regulations concerning the International Carriage of Dangerous Goods by Rail
SDS	Safety Data Sheet
STP	Sewage treatment plant
ThOD	Theoretical oxygen demand (ThOD)
TLM	Median Tolerance Limit
VOC	Volatile Organic Compounds
CAS-No.	Chemical Abstract Service number
N.O.S.	Not Otherwise Specified
vPvB	Very Persistent and Very Bioaccumulative
ED	Endocrine disrupting properties

Safety Data Sheet (SDS), EU

This information is based on our current knowledge and is intended to describe the product for the purposes of health, safety and environmental requirements only. It should not therefore be construed as guaranteeing any specific property of the product.

Verbindung: Hebel/Kolben
Joint: Lever/Piston
Jonction: Levier/Piston
Vorbindelse: Arm/Stempel
Conexión :Palanca/Biela
Raccorrd: Leva/Pistone
Verbeinding : Hevel/Zuiger
União: alavanca/biela
Förbindning: Spak/kolv
连接: 棘轮/杠杆

Połączenie - dzwignia/tłok
Tribol TR 3020/1000-0


Verzahnung: Mitnehmer/Wechseleinsatz
Toothed wheel: tappet/interchangeable insert
Denture : entraîneur / insert de remplacement
Fortanding: medbringer/udskiftelig indsats
Rueda dentada:
pieza de arrastre/pieza insertada intercambiable
Dentatura: trascinatore/inserto intercambiable
Vertanding: meenemer/verwisselbaar inzetstuk
Zona estriada: arrastador/bit de caixa
Kuggbana: Medbringare/Växelinsats
啮合装置: 从动轮/可更换安装件
Zazębienie - zabierak / wkładka wymienna

RAFFOL C 68

Lagerung Sechskanteinsatz
Hexagonal insert bearing
Installation insert hexagonal
Lagring til sekskantindsats
Soporte de asiento hexagonal
Installazione d' inserto esagonale
Lagering voor moerdopsleutel
suporte de inserção sextavada
Lagring sexkantinsats

六角钻头轴承
Łożyskowanie, wkładka sześciokątna

Tribol TR 3020/1000-0

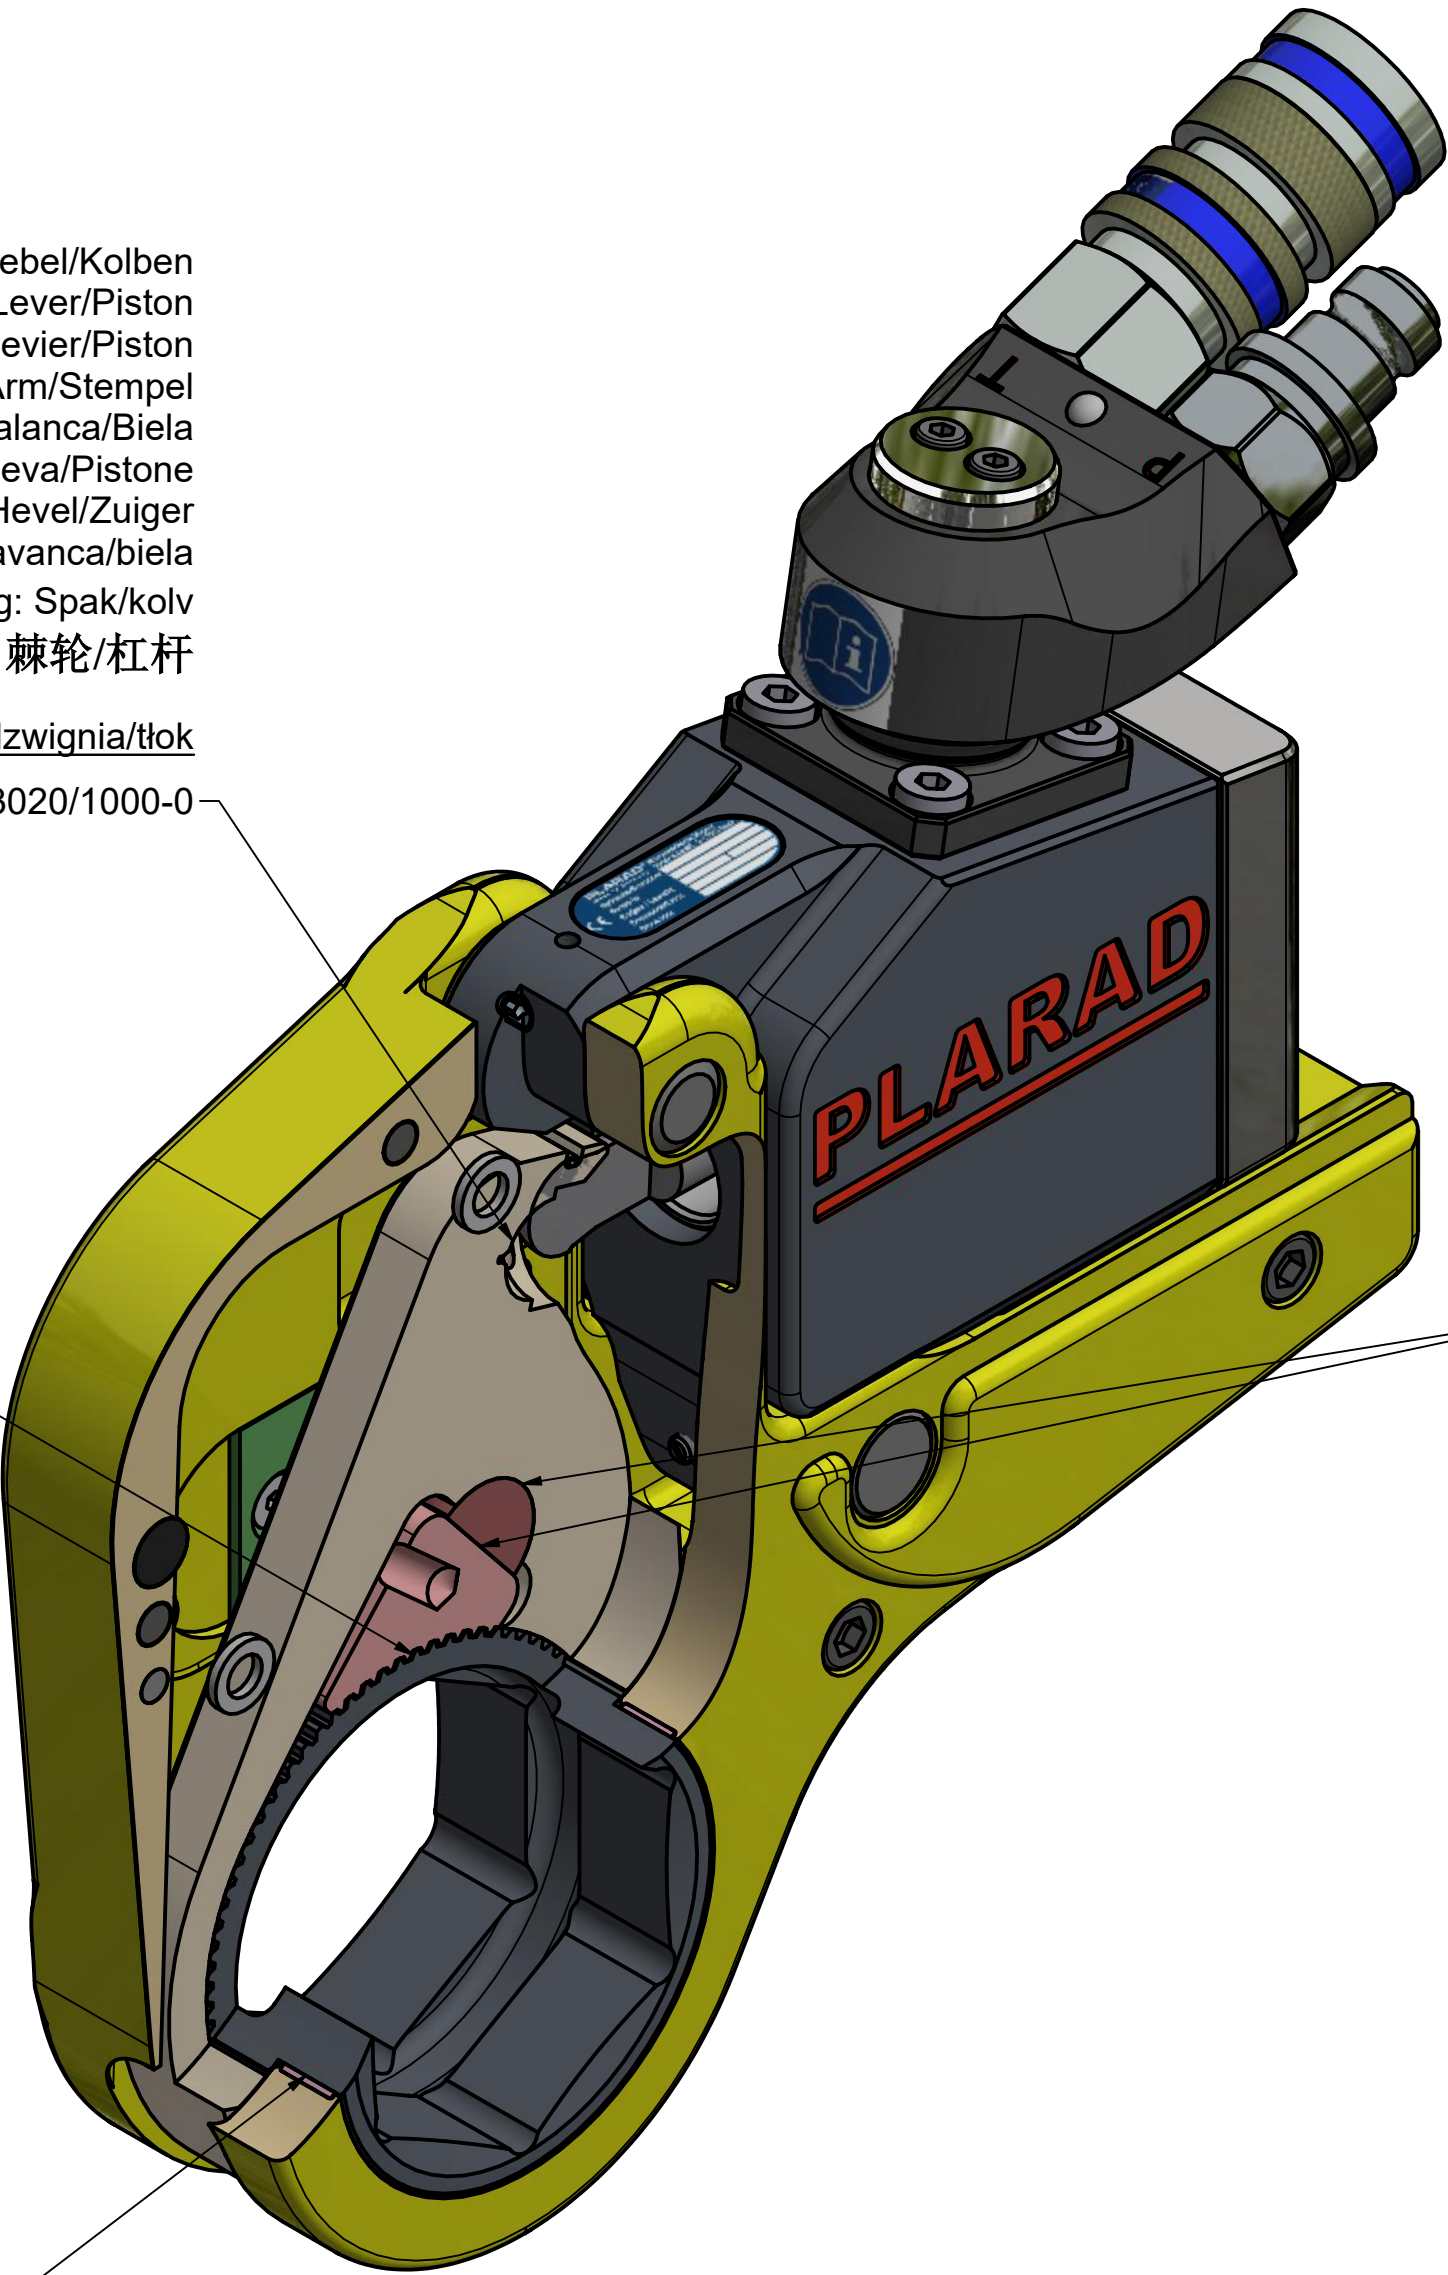

Gelenkstück
Half ball
Joint articule
Ledforbindelse
Pieza de articulación
Articolazione
Scharnier
Articulação
Länk
半球块
Przegłub

Tribol TR 3020/1000-0

Schmierstellen/Points of lubrication/Points de graissages/
Smøresteder/puntos de engrase/Punti d ingrassaggio/
Smeerpunt/ Plano de lubrificação/ Smörjställen / 润滑部位/Punkty smarowania

Zust.				Änderungen				Datum			
Datum				Name				Zust.			
Änderungen				Datum				Name			
PLARAD [®] Maschinenfabrik Wagner GmbH & Co.KG				Diese technische Unterlage darf ohne unsere Genehmigung weder vervielfältigt noch Dritten zugänglich gemacht werden. Wir behalten uns alle Rechte vor.				Toleranztafel Längenmaße nach DIN 2768 T1 Allgemeintoleranzen. Alle Werte in mm. Alle Werkstoffe / Spanende Bearbeitung Toleranz- klasse			
mittel (m)				± 0,1				± 0,1			
von 0,5 bis 3				über 3 bis 6				über 6 bis 30			
± 0,2				über 30 bis 120				über 120 bis 400			
± 0,3				über 400 bis 1000				über 1000 bis 2000			
± 0,5				über 2000 bis 4000				± 1,2			
± 2,0											
Datum				Name				Benennung:			
gez.: 07.07.22				Niemietz				HSX F/W/ANSI			
gepr.: 07.07.22				Niemietz				Schmierplan			
CAD- Zeichnung, Nur DV- gestützt ändern!				Material:				Maßstab: 1 : 1			
								Ersetzt: D51-000-0-57200			
								Gewicht: -			



ISO 9001:2015
ISO 14001:2015
Management
System

www.tuv.com
ID 1100012007

PLARAD[®]
Torque & Tension Systems



EC Declaration of Conformity

**Translation of
original**

Manufacturer	Maschinenfabrik Wagner GmbH & Co. KG
	Birrenbachshöhe 17 53804 Much Germany
Person authorised to compile the technical file	Jörn Grindel
Product name	Low-profile wrench unit HSX 1 / 2 / 5 / 8 / 12 / 20 / 30 / 45 Drive unit SX-EC 1 / 2 / 5 / 8 / 12 / 20 TS SX-EC 1 / 2 / 5 / 8 / 12 MS SX 30 / 45 TST SX 1 / 2 / 5 / 12 MST
Type	See rating plate
Serial number Year of manufacture	See rating plate

The manufacturer declares that the machinery conforms to all relevant requirements of the directive:

2006/42/EC	EC Machinery Directive
------------	------------------------

The following harmonised standards have been applied:


EN ISO 12100:2010	Safety of machinery - General principles for design - Risk assessment and risk reduction
DIN EN ISO 11148-1:2013-05	Hand-held non-electric power tools - Safety requirements
DIN EN ISO 4413:2011-04	Hydraulic fluid power - General rules and safety requirements for systems and their components
BGR 237	Hydraulic hose lines and hydraulic fluids – regulations for safe application

Much, 22/04/2026	signed Jörn Grindel (Managing Director)
------------------	---



ISO 9001:2015
ISO 14001:2015
Management
System
www.tuv.com
ID 1100012007

 PLARAD[®]
Torque & Tension Systems



EG – Konformitätserklärung

Original

Hersteller	Maschinenfabrik Wagner GmbH & Co. KG
	Birrenbachshöhe 17 53804 Much Deutschland
Dokumentations- Verantwortlicher	Jörn Grindel
Produktbezeichnung	Kassette HSX 1 / 2 / 5 / 8 / 12 / 20 / 30 / 45 Antriebseinheit SX-EC 1 / 2 / 5 / 8 / 12 / 20 TS SX-EC 1 / 2 / 5 / 8 / 12 MS SX 30 / 45 TST SX 1 / 2 / 5 / 12 MST
Typ	Siehe Typenschild
Seriennummer Baujahr	Siehe Typenschild


Der Hersteller erklärt, dass die Maschine allen einschlägigen Bestimmungen der Richtlinie entspricht:

2006/42/EG	Maschinenrichtlinie
------------	---------------------

Folgende harmonisierte Normen wurden angewandt:

EN ISO 12100:2010	Sicherheit von Maschinen- Allgemeine Gestaltungsleitsätze- Risikobeurteilung und Risikominderung
DIN EN ISO 11148-1:2013-05	Handgehaltene nicht elektrisch betriebene Maschinen - Sicherheitsanforderungen
DIN EN ISO 4413:2011-04	Fluidtechnik - Allgemeine Regeln und sicherheitstechnische Anforderungen an Hydraulikanlagen und deren Bauteile
BGR 237	Hydraulik Schlauchleitung – Regeln für den sicheren Einsatz

 Much, den 22.04.2026


Jörn Grindel
(Geschäftsführung)



**Translation of
original**

EC Declaration of Conformity

Manufacturer	Maschinenfabrik Wagner GmbH & Co. KG
	Birrenbachshöhe 17 53804 Much Germany
Person authorised to compile the technical file	Claudia Beyert-Wagner
Product name	Low-profile wrench unit HSX1power 1 / 2 / 5 / 8 / 12 / 20 / 30 / 45 Drive unit SX1power 1 / 2 / 5 / 8 / 12 / 20 / 30 / 45
Type	See rating plate
Serial number Year of manufacture	See rating plate

The manufacturer declares that the machinery conforms to all relevant requirements of the directive:

2006/42/EC	EC Machinery Directive
------------	------------------------

The following harmonised standards have been applied:

EN ISO 12100:2010	Safety of machinery - General principles for design - Risk assessment and risk reduction
DIN EN ISO 11148-1:2013-05	Hand-held non-electric power tools - Safety requirements
DIN EN ISO 4413:2011-04	Hydraulic fluid power - General rules and safety requirements for systems and their components
BGR 237	Hydraulic hose lines and hydraulic fluids – regulations for safe application


Much, 13.11.2025	signed Claudia Beyert-Wagner (Managing Director)
------------------	--



ISO 9001:2015
ISO 14001:2015
Management
System

www.tuv.com
ID 1100012007

 PLARAD[®]
Torque & Tension Systems



EG – Konformitätserklärung

Original

Hersteller	Maschinenfabrik Wagner GmbH & Co. KG
	Birrenbachshöhe 17 53804 Much Deutschland
Dokumentations- Verantwortlicher	Claudia Beyert-Wagner
Produktbezeichnung	Kassette HSX1power 1 / 2 / 5 / 8 / 12 / 20 / 30 / 45 Antriebseinheit SX1power 1 / 2 / 5 / 8 / 12 / 20 / 30 / 45
Typ	Siehe Typenschild
Seriennummer Baujahr	Siehe Typenschild


Der Hersteller erklärt, dass die Maschine allen einschlägigen Bestimmungen der Richtlinie entspricht:

2006/42/EG	Maschinenrichtlinie
------------	---------------------

Folgende harmonisierte Normen wurden angewandt:

EN ISO 12100:2010	Sicherheit von Maschinen- Allgemeine Gestaltungsgrundsätze- Risikobeurteilung und Risikominderung
DIN EN ISO 11148-1:2013-05	Handgehaltene nicht elektrisch betriebene Maschinen - Sicherheitsanforderungen
DIN EN ISO 4413:2011-04	Fluidtechnik - Allgemeine Regeln und sicherheitstechnische Anforderungen an Hydraulikanlagen und deren Bauteile
BGR 237	Hydraulik Schlauchleitung – Regeln für den sicheren Einsatz

Much, den 13.11.2025

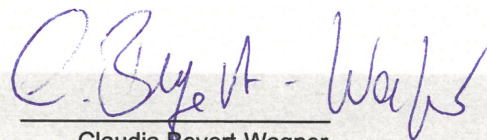
Claudia Beyert-Wagner
(Geschäftsführung)