



# Feeding systems for handheld tools

Efficient and intelligent feeding with eacy feed, the new generation vibratory bowl feeder.



- Approx. 80 % energy savings
- Efficiency and worldwide application one design for all markets

Our feeding systems consist of modules that are adapted to each other: one feeder with integrated controller, a handheld screwdriver or press-insertion devices and all other add-on components that fit the customer's application.

This proven system with an extreme high feed rate, allows a rational and process-optimized assembly.











# OUR RANGE OF FEEDING SYSTEMS FOR HANDHELD TOOLS

#### Vibratory bowl feeder

DEPRAG feeders with a vibratory drive are particularly suitable for screws from < M1 to M8.

Shaft lengths of 5 mm to 50 mm can be processed.

For counter-sunk head screws especially, vibratory bowl feeders are a functional solution. The high output of DEPRAG vibratory bowl feeders distinguishes them from other feeding systems.

→ Technical data can be found on page 6.

#### Sword feeder

Sword feeders or segment feeders are used when components are particularly sensitive and a more gentle feeding environment is required. They are also extremely quiet. Our sword feeders can be used for screw sizes M2 to M6. They are ideal for screws up to 25 mm in length.

Balls with a diameter of 1 to 12 mm can also be fed.

→ Technical data can be found on page 7.

### Pick-and-Place feeding system

If feeding via a hose system is not possible e.g. if the screw has a non favourable ratio in relation to the head diameter vs overall length, then we offer special solu-tions such as a pick-and-place procedure with vacuum pick or gripper pick devices.

→ Please contact us if you are interested in this individual solution.

#### Screw presenters / Screw dispenser

**Screw presenters** for manual screwdrivers for the processing of screws with a shaft-diameter of 1 - 5 mm and a shaft-length of max. 25 mm.

**Function:** The pickup of the screw is done by a magnetic bit or vacuum suction. An operator can comfortably pickup the screw with a forward motion.

The **screw dispenser** is optimised for use in manual workstations.

**Function of the screw dispenser:** The screws are shot from the feeding system into the container of the screw dispenser. The operator reaches into the extraction area, an optical sensor detects the hand and activates the opening of a slide. The screws fall from the container into the operator's hand.

Screw presenters Screw dispenser → <u>Catalog D3840</u>

→ Catalog D0066



### Screwdrivers for the feeding system

Our feeders can be used in combination with almost any electric or pneumatic screwdriver of the MICROMAT/MINIMAT range. Additionally we also offer screwdrivers with ESD compliance.

→ Technical data can be found on page 8.

## More feeding systems from our range

Step feeder Mini Screw Feeder Storage devices

→ Catalog D3835

→ Catalog D3836

→ Catalog D3850



#### CLEAN FEED - THE DEPRAG CONCEPT FOR TECHNICAL CLEANLINESS


In particular with the handling of small, sensitive components, the subject of Technical Cleanliness is becoming more in demand, for example in the manufacturing of light electronic or hydraulic products. In response to the rising trend of Technical Cleanliness we now offer a program of specifically designed solutions.

The assembly of critical parts, components and systems in conjunction with Technical Cleanliness is done in the so-called clean production environment. DEPRAG offers proven components that meet the requirements of Technical Cleanliness in automatic parts feeding and assembly. Particles are minimised using friction and/or vacuum with the help of a range of methods and components.


Your Advantage: Integrated concept for Technical Cleanliness! The complete program of all required components from a single source.

Application of the following equipment can help to produce the optimal results:

- Pre-cleaned assembly components (e.g. Arnold Cleancon® screws) fewer particulates due to an additional cleaning process
- DEPRAG HSF Sword Feeder vibration free part feeding and therefore less particle generation
- DEPRAG-inverted screw assembly unit use gravity to your advantage inverted screwdriving with the DEPRAG-inverted screw assembly unit
- DEPRAG Particle Killer debris in the autofeed process is reduced selectively
- DEPRAG BitCleaner suction of metallic abrasion
  Say goodbye to annoying particles during the fully automatic tightening process!
  The DEPRAG BitCleaner is the latest addition to our CleanFeed concept and removes unwanted particles that occur during the engagement process (connection of the bit with the screw drive) and can stick to the bit. Through a cyclical cleaning process, this innovative tool significantly improves Technical Cleanliness.
- DEPRAG SFM-V vacuum screwdriving module debris created during the assembly process is extracted usin vacuum sources

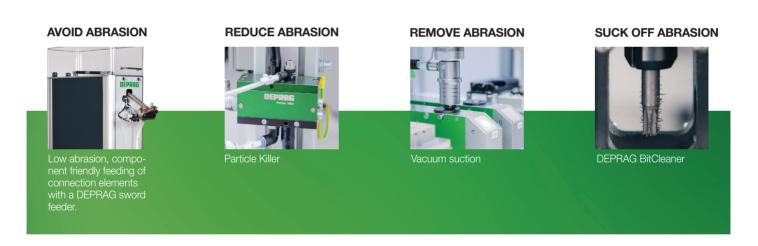

Technical data	Inline Variant	Pick&Place Variant
Required control components	Pneumatic Valve/Vacuum Generator	Pneumatic Valve/Vacuum Generator
Connections	24VDC PNP	24VDC PNP
Dimensions mm (LxWxH)	170 x 30 x 120 (without hoses)	540 (due to 160 mm load stroke) x 50 x 125 (without hoses)
		Pick to light

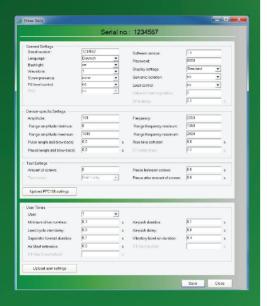

#### **SOFTWARE SOLUTIONS**

# PFC100 Manager – the parameterisation software for PFC100 controllers

The PFC100 Manager facilitates the reading and saving of parameters as text files for every PFC100 controller. Saved parameters can be transferred to any PFC100 controller quickly and simply using the PFC100 Manager.

# The connection cable 385520B required to connect the PC and PFC100 must be ordered separately.

The software download is available from the myDEPRAG customer portal (my.deprag.com). Registered users can activate the activation code and manage licences in MY ACCOUNT > DEPRAG Apps.

Available languages: German and English


Part number:

PFC100 Manager, activation key, part no. 122000

Further information can be found in our catalog D3900E or on our website www.deprag.com

#### STRUCTURE OF A DEPRAG FEEDING SYSTEM

DEPRAG feeding systems consist of the feed bowl unit, screw separator, an air connection and air maintenance unit, a mains power switch and electronic controller, 2 m standard length hose set, the mouthpiece guide and the mouthpiece as well as an appropriate screwdriver receiver (adapter) and a sound enclosure cover.

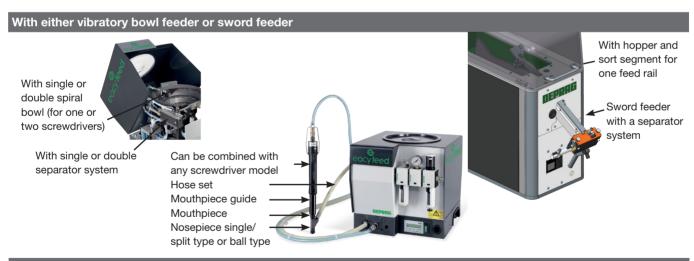

If feeding with a hose system is not possible, we offer special solutions, such as the pick-and-place procedure




Defined pick position with integrated screw pick control option



#### **GUIDELINE FOR THE SELECTION OF A SUITABLE FEEDER**

## STEP 1: Feeding criteria

Basically all "shaft-heavy" screws with a head which fulfils the following criteria are suitable for processing with our feed systems:

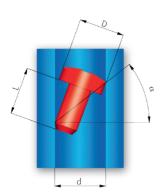

Feeding criteria: a > 30°

d ~ D + 0.5 mm

Approximate formula: L > D + 2 mm

d = Internal diameter feed hose

D = Screw head diameter

L = Screw shaft length

## STEP 2: Screw quality

For reliable feeding machines a DIN quality standard (allowable 3% bad parts) is not always sufficient.

Higher levels of screw/fastener quality improve the feeder's reliability.

The goal should be a quality grade of 10 ppm ("parts per million"). I.e. in every 100,000 screws there can be 1 bad part.

#### STEP 3

Which feeding principle is best suited to your application?

A vibratory spiral bowl is particularly suited to screws with awkward dimensions or those with special feed rate requirements.

The sword feeder is applied when extremely gentle handling of the parts is required or when very low noise level is a must.

If feeding with a hose system is not possible we also offer pick-and-place procedure.

#### STEP 5: Space available on the component


For effective use of the handheld screw feeders the space available around the screw head on the assembled components is very important.

There is a certain space requirement for the nosepiece split type and ball type.

An even surface simplifies the positioning and handling of the tool. Slanted surfaces with small diameter recessed screw-holes can only be accessed with templates which are available as optional equipment.

# STEP 4: Determing the screw receiver

At the end of the mouthpiece there is a nosepiece ball type (1 or 2 rows) or a nosepiece split type, mounted to receive and position the screw.

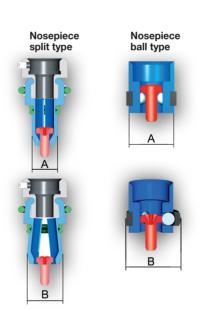

D = Head diameter


d = Shaft diameter

n = Space required to open

A = D + 2.5 mmB = A + D - d/2 B = 3D - 2d + 5 mm

 $n = A \times B$ 

n = ø B

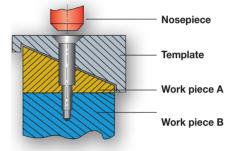

# STEP 6: Single or multiple feeding / screwdrivers?

Using a dual spiral vibratory bowl (type 1522 and 1622) one feeding machine can supply two separate screw outlet positions/screwdrivers. Compared to the investment of two single feeding machines, investment in a twin device saves approximately 25 %.

### STEP 7: Specification

For the correct specification of your screw feeding machine the following data is required:


- Voltage / frequency
- Choice of screwdriver model (torque and speed)
- Screw dimension and screw type (if available – DIN no.)
- Torque (if known)
- Details dimensions of assembly components
- Hose length (if over the standard length of 2 m).


To process your order we require sample screws (approx. 1 feed bowl volume) and if possible some samples of the part to be assembled.



# TECHNICAL DATA VIBRATORY BOWL FEEDER



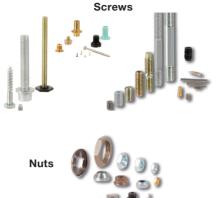

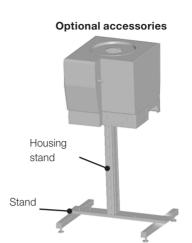

Material to be fed		Srews or nuts						
Standard version	Туре	11011-0.15	11022-0.15	11011-0.75	11022-0.75	11011-1.2	11011-2.5	11022-2.5
Control unit				PFC100 Controller				
Transport principle				Vik	oratory bowl	feeders *)		
Amount of connectable driv	ers	1	2	1	2	1	1	2
Feed rate	Parts/min	45	2 x 45	45	2 x 45	25	30	2 x 30
Filling capacity	liter/gal.	0.15 / 0.04	0.15 / 0.04	0.75 / 0.2	0.75 / 0.2	1.2 / 0.32	2.5 / 0.66	2.5 / 0.66
Voltage	V/Hz	24 Volt DC		24 Volt DC				
Power consumption	W	max	max. 50		max. 50		max. 150	
Air pressure requirement	bar/PSI	6 / 85.2		6 / 85.2				
Air connection size	mm/in.	10 / 3/8	10 / 3/8	10 / 3/8	10 / 3/8	10 / 3/8	10 / 3/8	10 / 3/8
Dimensions W x D x H	mm in.	296 x 360 x 289 11 <sup>21</sup> / <sub>32</sub> x 14 <sup>3</sup> / <sub>16</sub> x 11 <sup>3</sup> / <sub>8</sub>		360 x 414 x 368 14 <sup>3</sup> / <sub>16</sub> x 16 <sup>5</sup> / <sub>16</sub> x 14 <sup>1</sup> / <sub>2</sub>		547 x 600 x 294 21 <sup>17</sup> / <sub>32</sub> x 23 <sup>5</sup> / <sub>8</sub> x 11 <sup>37</sup> / <sub>64</sub>		
Weight	kg/lbs	appr. 18/39.6	appr. 20/44	appr. 32/71	appr. 34/75	appr. 40/88	appr.	60/132
Feedhose length standard	m/ft.	4 / 13.2	4 / 13.2	4 / 13.2	4 / 13.2	4 / 13.2	4 / 13.2	4 / 13.2
Feedhose length max.	m/ft.	8 / 26.4	8 / 26.4	8 / 26.4	8 / 26.4	8 / 26.4	8 / 26.4	8 / 26.4
Technical details on screws:								
Max. head diameter	mm/in.	5 / <sup>13</sup> / <sub>64</sub>	4 / 5/32	12 / 15/32	8 / 5/16	12 / 15/32	16 / 5/8	14 / 35/64
Max. shaft length	mm/in.	8 / 5/16	8 / 5/16	35 / 1 <sup>3</sup> /8	25 / 63/64	50 / 131/32	60 / 2 <sup>23</sup> /64	60 / 2 <sup>23</sup> /64
Range of shaft diameter	mm/in.	1.2-2.5 / 0.048-0.1	1.2-2.5 / 0.048-0.1	1.5-7/0.06-0.27	1.5-7/0.06-0.27	3-7 / 0.12-0.28	4-8 / 0.16-0.31	4-8 / 0.16-0.31
Technical details on nuts:								
max. AF	mm/in.	4 / 5/32	3 / 0.12	10 / 3/8	8 / 5/16	11 / 0.43	13 / 0.5	13 / 0.5
max. height	mm/in.	3 / 0.12	2 / 0.08	5 / 13/64	4 / 5/32	6 / 0.23	8 / 5/16	8 / 5/16
Included in delivery:		Power unit 105535A		Power unit 105535A			Power unit 2041061	
Required accessories:		Power cable 812587 (EU) or Power cable 812295 (US)		Power cable 812587 (EU) or Power cable 812295 (US)		Power cable 812587 (EU) or Power cable 812295 (US)		
Optional accessories:			,		, ,			
Housing stand		102483A		3641392A		3641392A	345680A	
Stand (required for housing sta	ind)	994449		994449		994449	999309	
Fill level indicator		414965J		414965A		414965A	414965D	
Retaining plate		919	9198574 9198577			-		
More optional accessories:		Hopper (see catalog D3850E)						
		Special mouthpiece for critical screw head diameter to length relation						
	Part template for positioning							

\*) with plastic vibratory bowl



Our software solutions undergo continuous improvements. We recommend that you regularly update your software. In this way you will always receive the most up-to-date security updates, upgraded features and drivers. With the most current version of the software you can be sure that your device is optimally prepared for Industry 4.0.



A connecting cable is required to connect external controller with feeder. Part number will be assigned in case of an order.

Every feeding system contains all required attachments for the screwdriver such as mouthpiece guide, mouthpiece, locking sleeve and bits Various specialised versions are available depending on application and the screwdriver in use.

# **TECHNICAL DATA SWORD FEEDER**



Material to be fed		Screws		
Sword Feeder with integrated controller	Туре	1811-0.15-x*) Controller 6	11811-1.5 PFC18L Controller (insulation IP30)	
Amount of connectable drivers		1	1	
Feed rate	Parts/min	30	30	
Filling capacity	liter/gal.	0.15 / 0.04	1.5 / 0.4	
Voltage	V/Hz	230/50, 115/60	24 Volt DC	
Power consumption	W	20	50	
Air pressure requirement	bar/PSI	6.3 / 90	6 / 85.2	
Air connection size	mm/in.	10 / <sup>3</sup> /8	10 / 3/8	
Dimensions W x D x H	mm	320 x 255 x 260	267 x 704 x 550	
	in.	12 <sup>19</sup> /32 x 10 <sup>3</sup> /64 x 10 <sup>15</sup> /64	10 <sup>33</sup> /64 x 27 <sup>23</sup> /32 x 21 <sup>21</sup> /32	
Weight	kg/lbs	12 / 26.4	approx. 30 / 66	
Feedhose length standard	m/ft.	2 / 6.6	2 / 6.6	
Feedhose length max	m/ft.	5 / 16.4	8 / 26.24	
Technical details on screws:				
Max. head diameter	mm/in.	5 / <sup>13</sup> / <sub>64</sub>	12 / 15/32	
Max. shaft length	mm/in.	8 / 5/16	25 <sup>63</sup> /64	
Range of shaft diameter	mm/in.	1-2.5 / 0.04-0.1	2 - 6.3 / 0.08 - 0.25	
Included in delivery:		-	Power unit 105535A	
Required accessories:		-	Power cable 812587(EU) or power cable 812295(US)	

\*) x = Voltage Supply (1: 230 V / 50 Hz, 2: 115 V / 60 Hz)

Optional accessories:		Hopper (see catalog D3850E)		
Additional function controls		screw presence control, inlet control, fill level height	-	
Housing stand	Part no.	-	3641393A	
Stand (required for housing stand)	Part no.	-	994449	
Retaining plate	Part no.	-	9198574	



## **SPECIAL SOLUTIONS**

Please contact our sales representatives if you cannot find a screwdriving technique suitable to your application in this description of our standard solutions.

As well as our standard solutions described in this catalog we also offer customer specific and application specific solutions.

#### **SCREWDRIVERS FOR FEEDERS**

MINIMAT-EC-SERVO-SCREWDRIVER with highest processing control

MINIMAT-EC-SCREWDRIVER with processing control

**ELECTRIC SCREWDRIVER with mechanical shut-off clutch** 

MICROMAT-Z/MINIMAT-Z - PNEUMATIC SCREWDRIVER

MICROMAT-FZ/MINIMAT-FZ - PNEUMATIC SCREWDRIVER with multi function control

SENSOMAT-Z - PNEUMATIC HANDHELD SCREWDRIVER with a mechanical clutch-function

#### **ERGOMAT-Z - THE AUTO STROKE SCREWDRIVER FOR FEEDERS**

When using feeders with hand-screwdrivers, it is necessary for the bit to retract, so that a new screw can fall into the feed-channel.

With the ERGOMAT-Z driver, this stroke is performed automatically within the driver.

The two components, clutch bearing and mouthpiece guide, are already integrated in the screwdriver to the components. The attribute of the clutch is a stroke in the food of the clutch of the clutc

housing. The stroke of the driver is activated by the feeder immediately after the screw is fed. The driver with the bit is positioned immediately above the screw head. When the screwdriver starts the screw cannot be pushed back into the mouth-piece. Because of the integrated stroke, the hand can quide the driver much closer to the screw hole.

Both features simplify the positioning process and ease handling. Additionally, the ERGOMAT-Z driver has all the advantages of the MINIMAT screwdriver series.

#### **Technical information**

- → Catalog D3161
- → Catalog D3000



- → Catalog D3480
- → Catalog D3420 and D3430
- → Catalog D3440
- → Catalog D3460



## Technical data ERGOMAT-Z, motor size 1

Screwdriver right rotation, right Push-to-start	ht shut-off Type Part no.	<b>347V-218</b> 406859A	<b>347V-318</b> 406859B	<b>347V-518</b> 406859C	<b>347V-718</b> 406859G	
Torque min.	Nm/in.lbs	0.3 / 2.7	0.3 / 2.7	0.2 / 1.8	0.2 / 1.8	
Torque max.	Nm/in.lbs	1 / 8.85	1.4 / 12.4	2 / 17.7	2.5 / 22.1	
Speed, idling	rpm	1900	1300	900	640	
Air consumption	m³/min/cfm	0.23 / 8	0.23 / 8	0.23 / 8	0.23 / 8	
Main body dia.	mm/in.	32/38 - 11/4 / 11/2	32/38 - 11/4 / 11/2	32/38 - 11/4 / 11/2	32/38 - 11/4 / 11/2	
Length	mm/in.	250 / 9 <sup>27</sup> / <sub>32</sub>	250 / 9 <sup>27</sup> / <sub>32</sub>	250 / 9 <sup>27</sup> / <sub>32</sub>	250 / 9 <sup>27</sup> / <sub>32</sub>	
Weight	kg/lbs	0.8 / 1.8	0.8 / 1.8	0.8 / 1.8	0.8 / 1.8	
Noise level	dB(A)	63	63	63	66	
Air hose dia.	mm/in.	6 / 1/4	6 / 1/4	6 / 1/4	6 / 1/4	
Drive hex. female DIN ISO 1173	3	1/4"	1/4"	1/4"	1/4"	
Quick change chuck, mounted		yes	yes	yes	yes	
For screwfeeding: Max. head of	liameter mm/in.	8 / 5/16	8 / 5/16	8 / 5/16	8 / 5/16	
Included in delivery:		Set of coupler and connector plug $\cdot$ Set of torque adjustment tools $\cdot$ Set of clutch springs				
Optional Equipment:  Clamping flange with pistol grip part no. 405545A (for conversion to use as pistol grip screwdriver)						

Performance data relate to an air pressure of 6.3 bar (90 PSI)



P.O. Box 1352 | D-92203 Amberg Carl-Schulz-Platz 1 | D-92224 Amberg Phone: +49 9621 371-0 | Fax: +49 9621 371-120 www.deprag.com | info@deprag.de